

Pianorivelle

PS2500
GPS2500

PS2500
GPS2500

SERVICE MANUAL

Schematic Diagrams



CODE : 270189



Index & Warnings

PS 2500 Opening Instructions - KeyboardDisassembling	2
GPS 2500 Opening Instructions - Keyboard Disassembling	3
PS 2500 Cabinet Assembly 1	4
PS 2500 Stand & Controls Assembly 2	5
GPS 2500 Cabinet Assembly	6
Block Diagram	7
Power Amplifier & Supply, Phones, Cross Over and Control & Midi I/O Schematic Diagrams	8
Power Aamplifier. & Supply, Control Midi I/O, Keyboard Interface and Cross Over PCB Layouts	9
Slider, L & R Controls Panel and Controls Panel Interface Schematic Diagrams	10
Right & Left Control Board - Control Panel Interface PCB Layout	11
L & R Contacts and Keyboard Interface Schematic Diagrams	12
Timing Diagram & Adjustment Table	13
CPU & Sound Generator Board (Part 1/2)	14
CPU & Sound Generator Board (Parts 2/2)	15
Audio/Video Interface Schematic Diagram	16
CPU & Sound Generator and Audio/Video Interface PCB Layouts	17
Optional Kits Mounting Instructions	18
Spare Part List	19

GENERAL MUSIC S.p.A. Sales Division: 47048 S. Giovanni in Marignano (RN) ITALY - Via delle Rose, 12 - tel. 0541/959511 - fax 550555 GENERAL MUSIC - fax 0541/957404



Notice

Service must be carried out by qualified personnel only. Any tampering carried out by unqualified personnel during the guarantee period will forfeit the right to guarantee.

For a correct operation of the instrument, after having switched off, be careful to wait at least 3 seconds before switching on again. To improve the device's specifications, the schematic diagrams may be subject to change without prior notice.

Schematic Notes

All components marked by this symbol have special safety characteristics, when replacing any of these components use only manufacturer's specified parts.

The (μ) micro symbol of capacitance value is substituted by U. The (Ω) omega symbol of resistance value is substituted by E. The electrolytic capacitors are 25Vdc rated voltage unless otherwise specified. All resistors are 1/8W unless otherwise specified. All switches shown in the "OFF" position. All DC voltages measured to ground with a voltmeter 20KOhm/V.

- | | |
|---|-------------------------|
| ← Soldering point. | ⬆ Supply voltage. |
| • Male connector. | ⬇ Logic supply ground. |
| ○ Female connector. | ⬇ Analog supply ground. |
| ⊕ M/F faston connector. | ⬇ Signal ground. |
| ⊕ Test point. | ⬇ Chassis ground. |
| ⬇ Flag joined with one or more flags with the same signal name inscribed. | |




ATTENTION


Observe precautions when handling electrostatic sensitive devices

PS2500 - To Open the Instrument


Disconnect the instrument from the mains.
Unscrew the four screws at the rear of instrument.
Remove the top panel in the direction as shown.

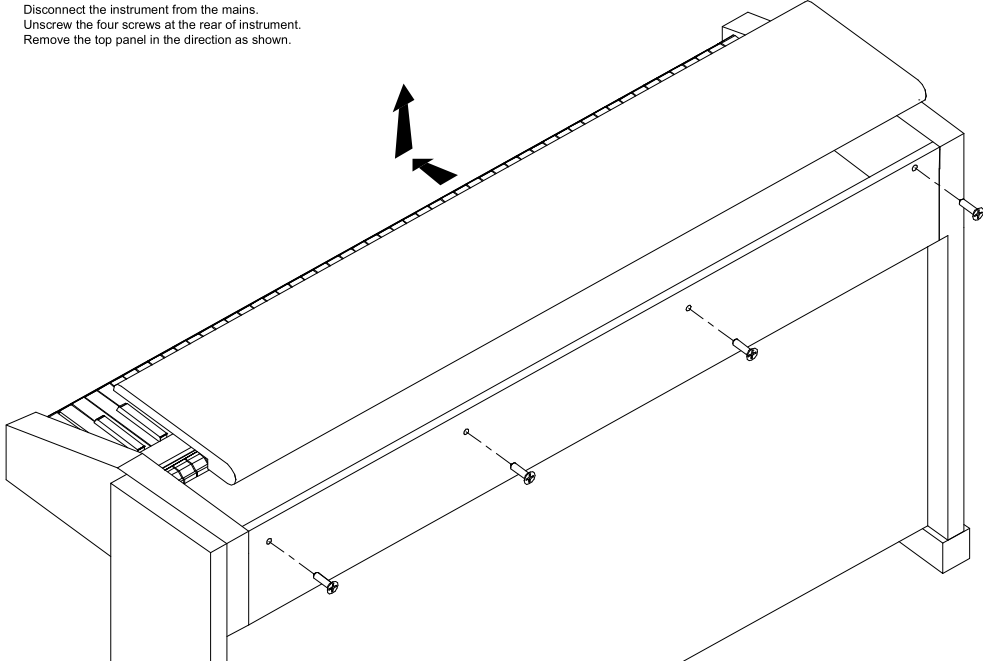


Remove the two locking plates (A) from the sides.
Remove the keyboard cover (slide it through the lateral guides).
To unlock the controls panel unscrew the three screws (B).

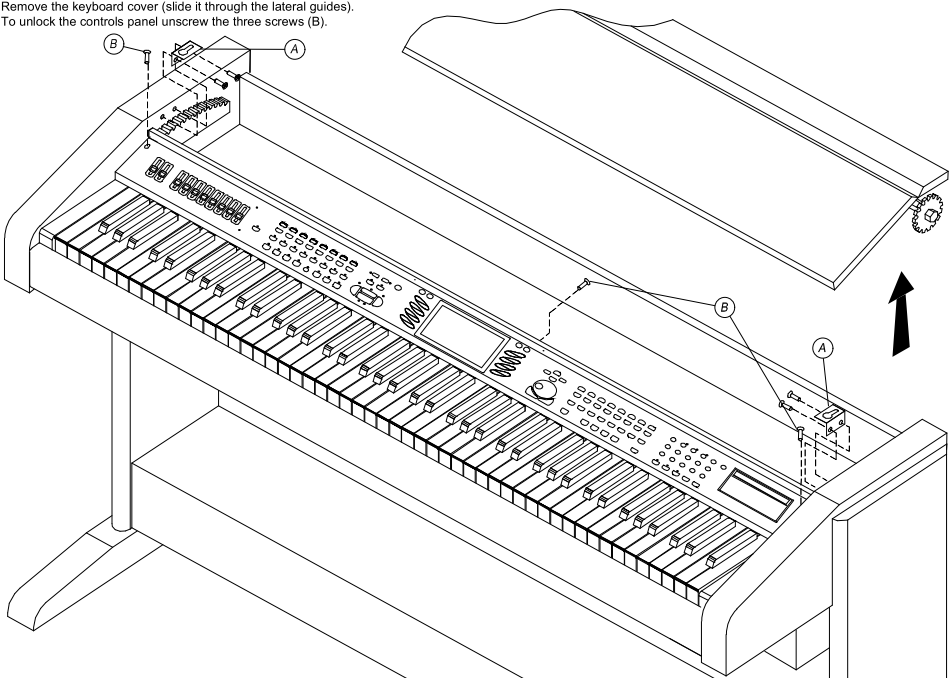

To remove the TP20 keyboard unscrew 11 screws (C) under the piano.
To remove the TP10 keyboard unscrew 8 screws (D) under the piano.

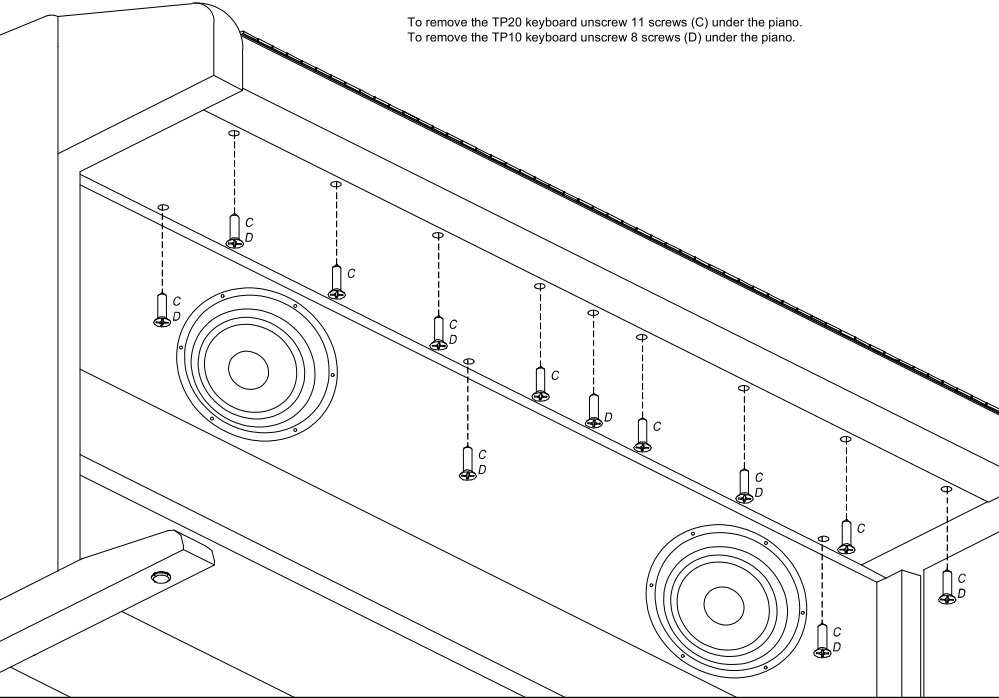

To remove a key insert a screwdriver or other similar object in the split at the key back, apply a light pressure and push in the direction shown.
NOTE: Before you remove a natural key you must remove the keyboard, if you remove a sharp key this operation is not necessary.

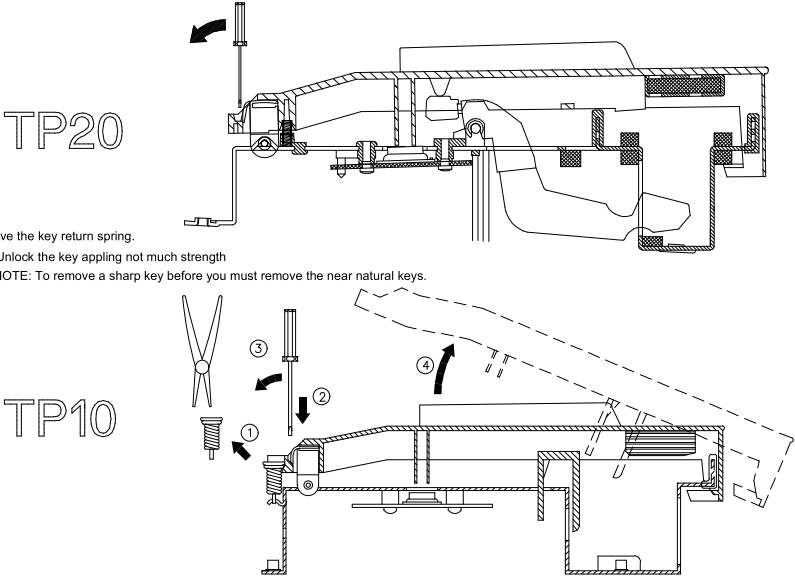



- ① Remove the key return spring.
②③④ Unlock the key applying not much strength
NOTE: To remove a sharp key before you must remove the near natural keys.

DRW: Broccoli	DISK: 550115	FCM	GENERALMUSIC S.p.A. ITALY
CND: Roccobelli	DISK: 42 PART: 01	PS2500 Opening Instructions & Keyboard Disassembling	ALL RIGHTS ARE RESERVED. NO COPIES OR REPRODUCTION OF THIS DOCUMENT PERMITTED WRITTEN AND EDITED BY GENERALMUSIC
APP: Conzatti	REV: 18/12/96		

GPS2500 - To Open the Instrument


Disconnect the instrument from the mains. Lift the cover and unscrew the three screws (A). Remove the protection panel by lifting it from the rear (B). Unscrew the two lateral screws (C). Lift up the front panel with the keyboard cover raised.

Note: to operate without difficulty two people are required.

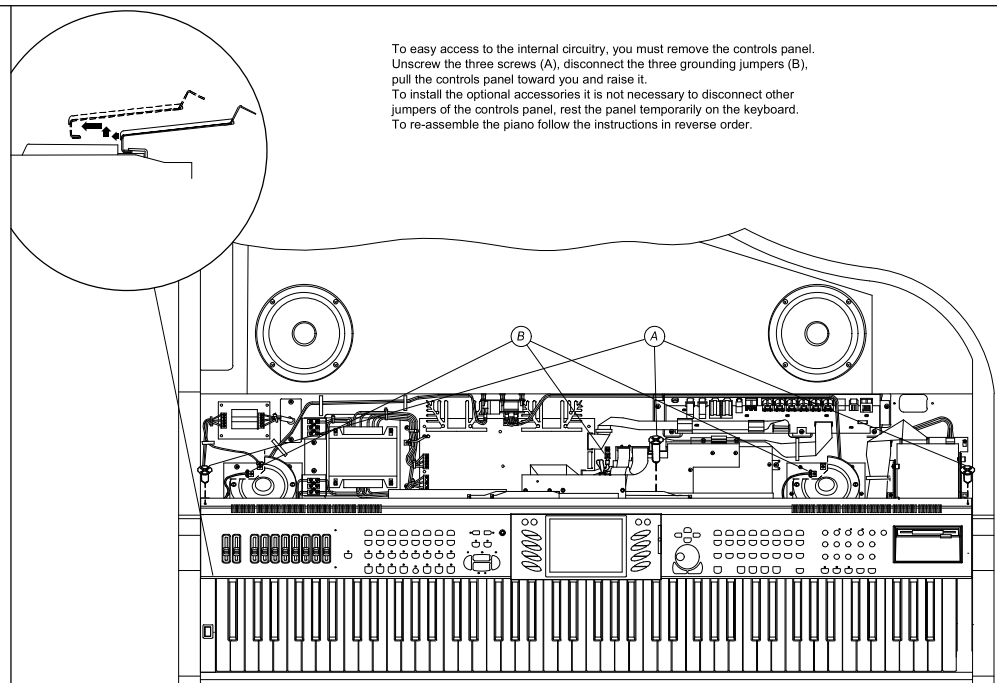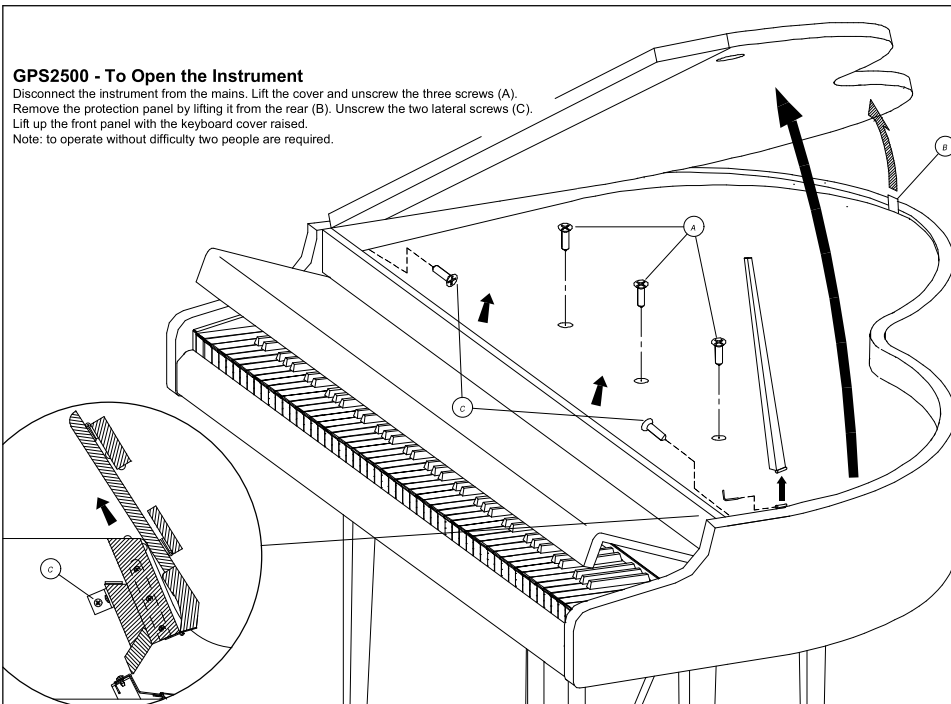

To easy access to the internal circuitry, you must remove the controls panel. Unscrew the three screws (A), disconnect the three grounding jumpers (B), pull the controls panel toward you and raise it. To install the optional accessories it is not necessary to disconnect other jumpers of the controls panel, rest the panel temporarily on the keyboard. To re-assemble the piano follow the instructions in reverse order.

To remove the TP20 keyboard unscrew 11 screws (C) under the piano. To remove the TP10 keyboard unscrew 8 screws (D) under the piano.

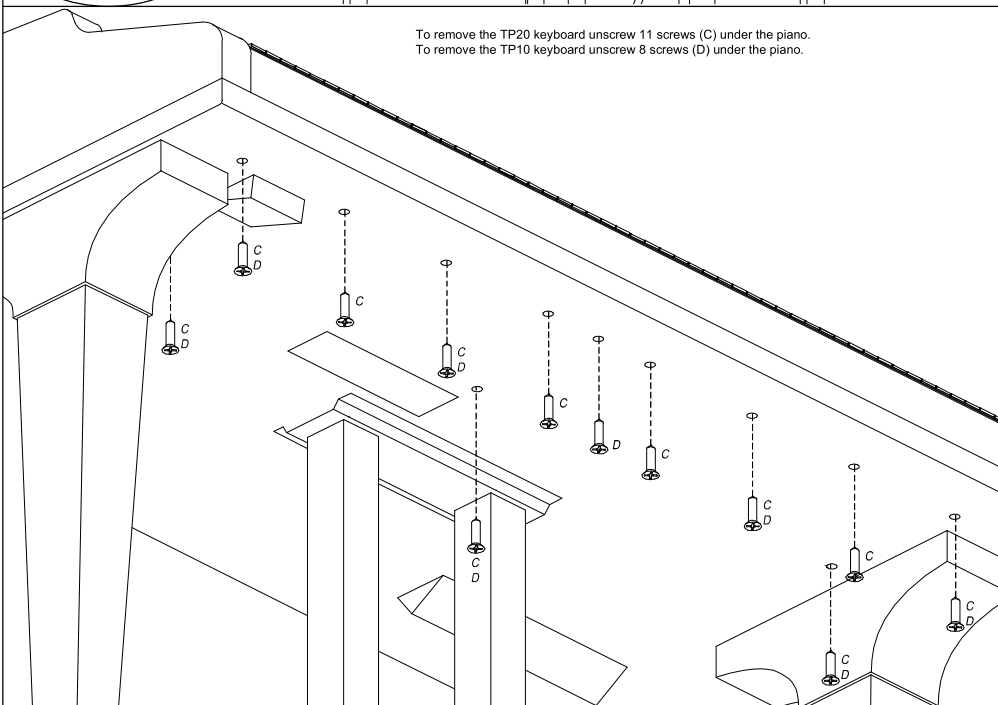

To remove a key insert a screwdriver or other similar object in the split at the key back, apply a light pressure and push in the direction shown. NOTE: Before you remove a natural key you must remove the keyboard, if you remove a sharp key this operation is not necessary.


TP20

① Remove the key return spring.


②③④ Unlock the key applying not much strength

NOTE: To remove a sharp key before you must remove the near natural keys.



TP10

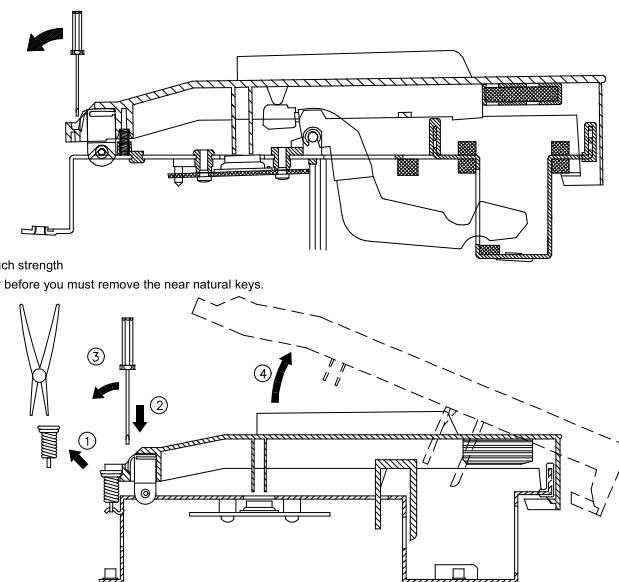

DRM: Bocato	DWG: 550116	PCB	GENERALMUSIC S.p.A. ITALY
CND: Rocca	DISK 42 PART: 1/1	GPS2500 Opening Instructions	ALL RIGHTS ARE RESERVED. NO COPIES
APP: Console	REV: 201206	& Keyboard Disassembly	OR REPRODUCE THIS DOCUMENT WITHOUT
			WRITTEN CONSENT BY GENERALMUSIC

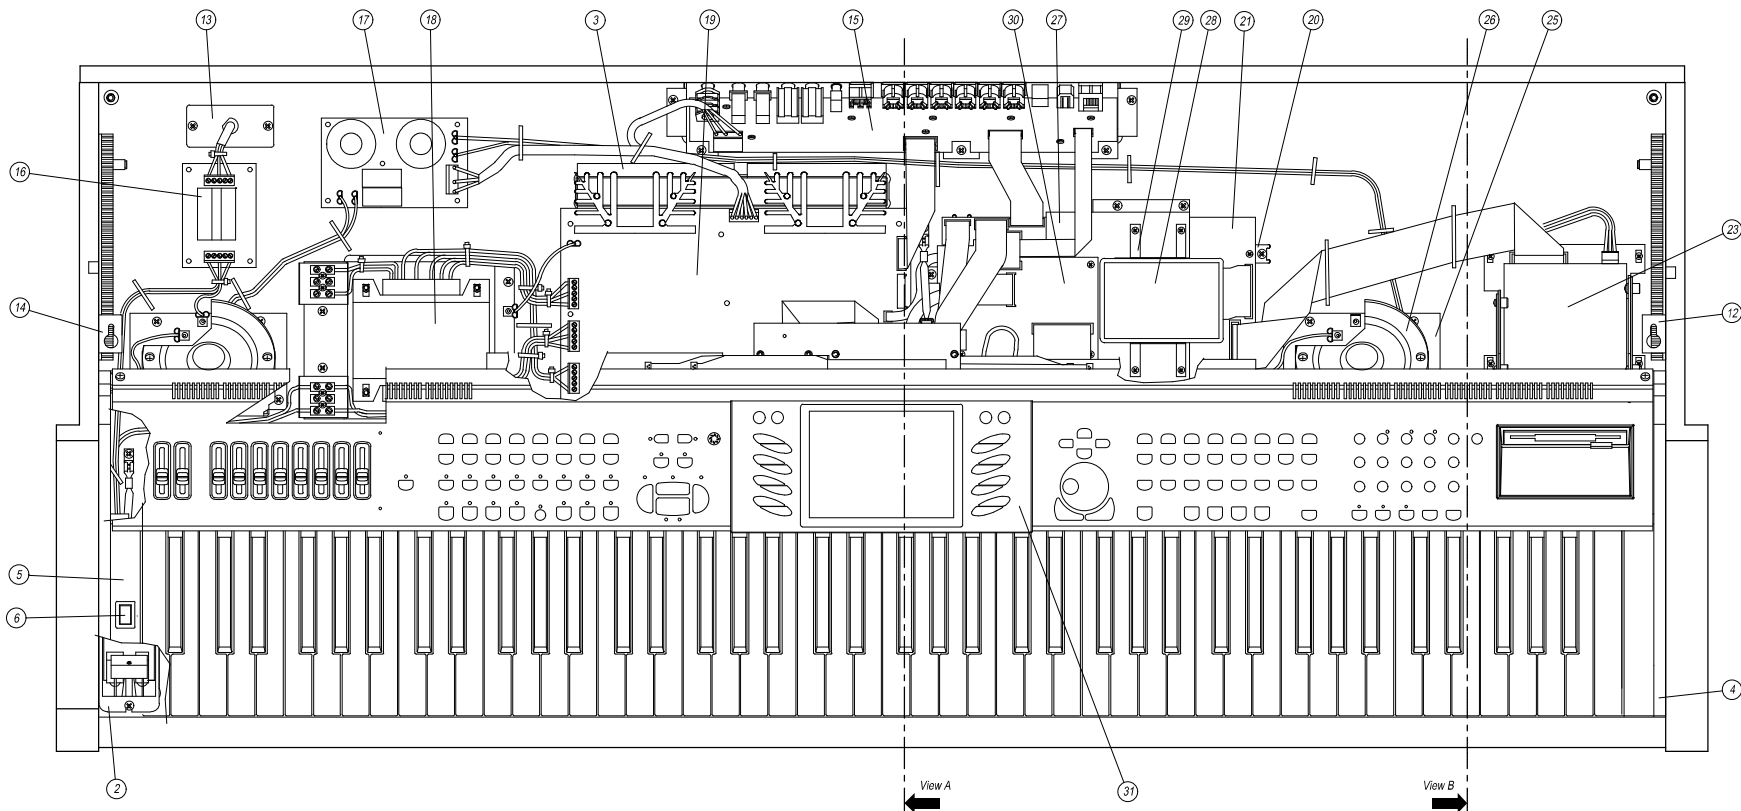


31	CONTROLS PANEL (see next page)
30	AUDIO/VIDEO INTERFACE BOARD
29	HARD DISK BRACKET
28	HARD DISK
27	AUDIO/VIDEO INTERFACE BOARD & H. D. SUPPORT
26	TWEETER
25	TWEETER SUPPORT
24	DISK DRIVE GROUP SUPPORT
23	3.5" DISK DRIVE
22	DISK DRIVE SUPPORT
21	CPU & SOUND GENERATOR BOARD
20	CPU & SOUND GENERATOR BOARD SUPPORT
19	POWER AMPLIFIER & SUPPLY BOARD
18	TRANSFORMER ASSEMBLY
17	CROSSOVER BOARD
16	MAINS FILTER BOARD
15	CONTROLS & MIDI I/O BOARD
14	LEFT COVER CLAMP
13	MAINS ASSEMBLY
12	RIGHT COVER CLAMP
11	CONTROL PANEL FRONT SUPPORT
10	CONTROL PANEL REAR SUPPORT
9	KEYBOARD ASSEMBLY (TP20 OR TP10)
8	KEYBOARD SLOPE SUPPORT
7	RACK
6	MAINS SWITCH
5	LEFT PANEL SUPPORT
4	RIGHT PANEL SUPPORT
3	HEATSINK GRID
2	PHONES BOARD
1	CABINET
Ref.	Description

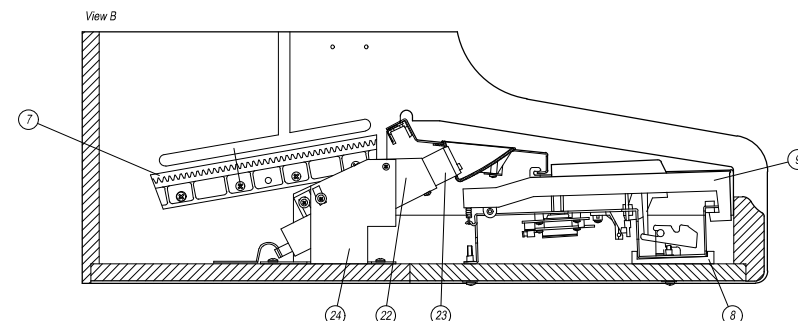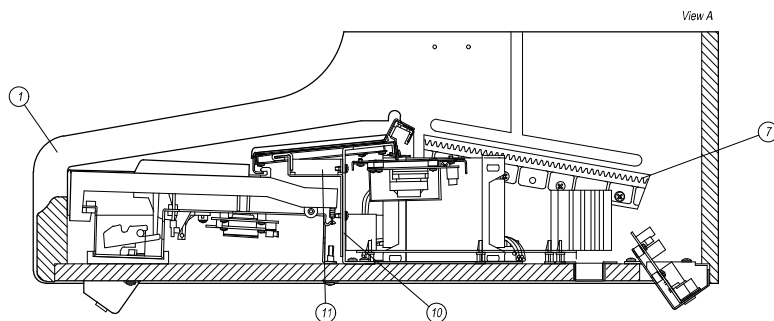


DRW: PALANGHI	DWG#: 550117	PCB#	GENERALMUSIC S.p.A. ITALY
CHK: BOCCATO	DISK: 42 PART: 01	PS2500	ALL RIGHTS ARE RESERVED. NO COPIES
APP: FALCON	REV: 17-12-96	CABINET ASSEMBLY	OR REPRODUCED THIS DOCUMENT WITHOUT
			WRITTEN CONSENT BY GENERALMUSIC

32	COVER
31	KEYBOARD COVER
30	CABINET
29	SPEAKER BOX
28	LEFT SIDE LEG
27	RIGHT SIDE LEG
26	MUSIC STAND
25	PEDAL CROSS-BAR
24	TRIPLE PEDAL ASSEMBLY
23	AC-DC ADAPTER SCREEN
22	CONTROL PANEL INTERFACE BOARD
21	BOARDS SUPPORT
20	DIAL KNOB
19	SLIDER POTENTIOMETER KNOB
18	SLIDER POTENTIOMETER FRAME
17	RED FELT (1230x12x1.5)
16	RIGHT CONTROLS PANEL BOARD
15	LEFT CONTROLS PANEL BOARD
14	SLIDERS BOARD
13	<STYLE GROUP> RUBBER KEY-PAD
12	<START/STOP> RUBBER KEY-PAD
11	<SOUND GROUP> RUBBER KEY-PAD
10	<EDIT> RUBBER KEY-PAD
9	DISPLAY LEFT RUBBER KEY-PAD
8	DISPLAY RIGHT RUBBER KEY-PAD
7	DISPLAY GLASS
6	DISPLAY FRAME
5	LCD DISPLAY ASSEMBLY
4	DISPLAY SUPPORT
3	DISK DRIVE FRAME
2	CLOTH FOR PANEL SLITS
1	CONTROL PANEL
Ref.	Description

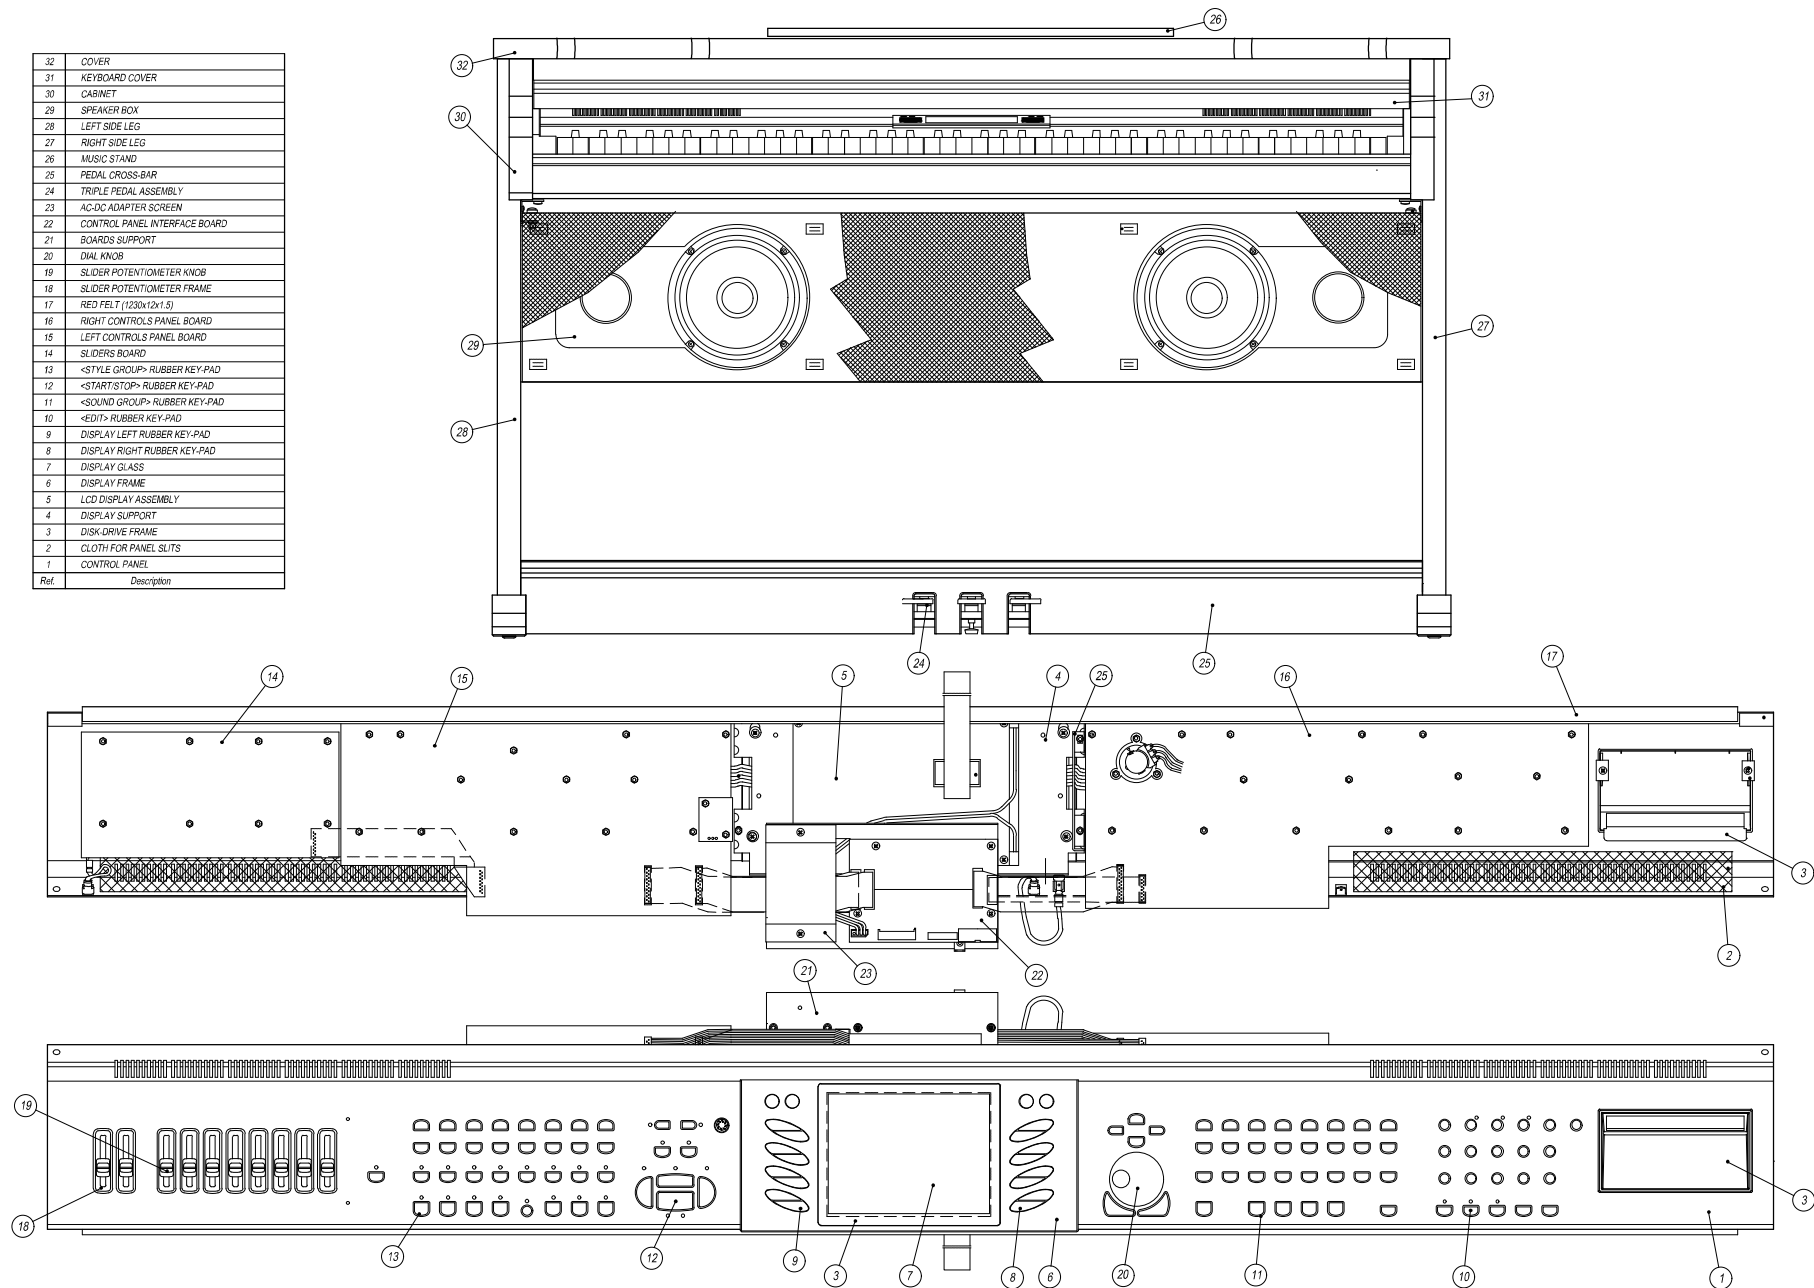

DRW: Palumbo	DWG: 550116	PCB	GENERALMUSIC S.p.A. ITALY
CND: Boccato	DISK 42 PART: 1/1	STAND & CONTROLS PANEL	ALL RIGHTS ARE RESERVED. NO COPIES
APP: Palumbo	REV: 18-12-86	ASSEMBLY	WITHOUT THIS DOCUMENT WITHOUT
			WRITTEN CONSENT BY GENERALMUSIC

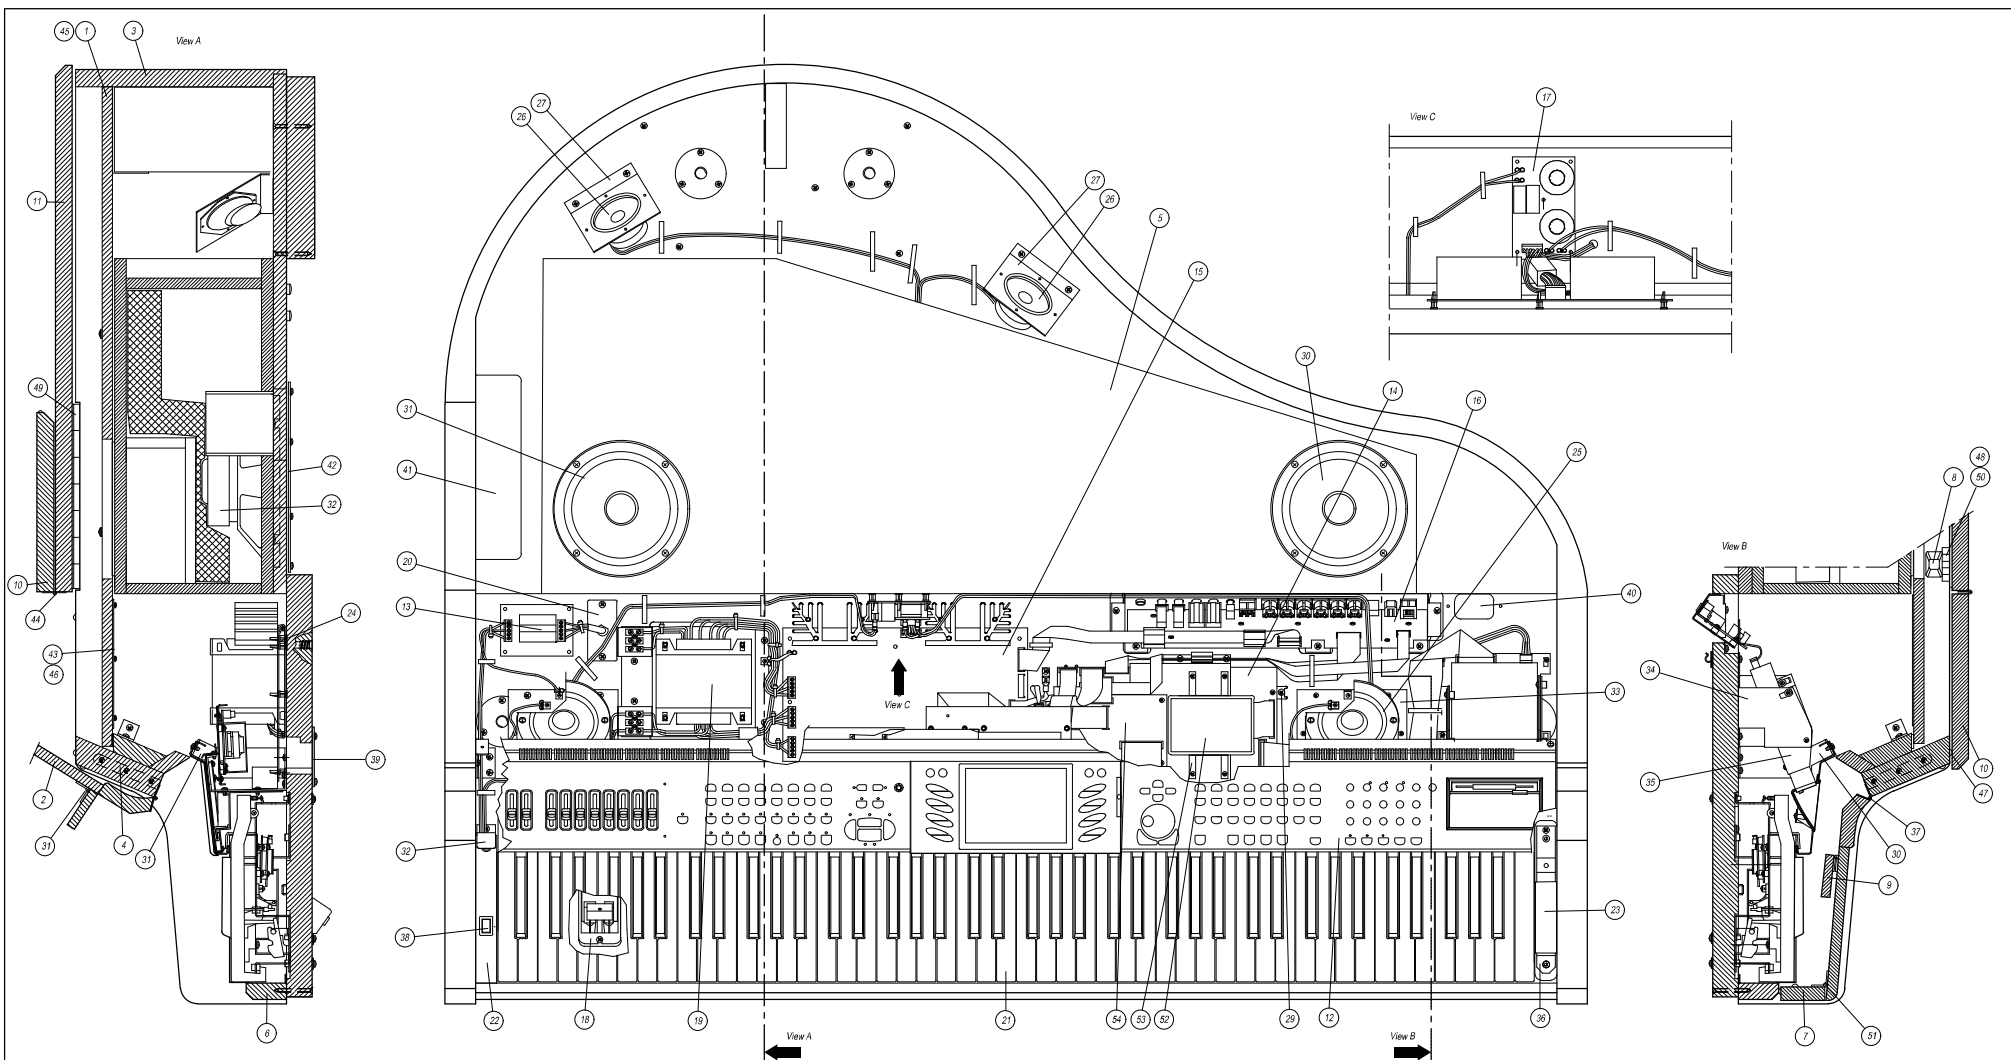


Ref.	Description
18	Phones Assembly
17	Cross-Over Board
16	Controls & Mid I/O Board
15	Power Amplifier & Supply Board
14	Cpu & Sound Generator Board
13	Mains Filter Board
12	Control Panel Assembly
11	Cover
10	Revolving Cover
9	Music Stand
8	Cover Stand
7	Revolving Keyboard Cover
6	Front Cross Bar
5	Speaker Box
4	Front Panel
3	Cabinet Chassis
2	Keyboard Cover
1	Speaker Panel


Ref.	Description
36	Cheek Support
35	Disk Drive Support
34	Drive Support Stand
33	Tweeter Support
32	8" Woofer
31	Hinge For Music Stand
30	6" Woofer
29	Cpu Board Support
28	Accessories Support
27	Tweeter Support
26	Cone Tweeter Speaker
25	Dome Tweeter Speaker
24	3.5" Disk Drive
23	Right Keyb. Cheek Block
22	Left Keyb. Cheek Block
21	Keyboard Assembly
20	Mains Assembly
19	Transformer Assembly

Ref.	Description
54	Audio/Video Interface Board
53	Hard Disk Support
52	Hard Disk
51	Hinge Between Keyb. Front & Top Covers
50	Hinge For Cover Stand
49	Hinge Between Cabinet and Cover
48	Washer For Cover Stand
47	Adhesive Beating Rubber
46	Adhesive Felt
45	Black Cloth
44	Hinge Between Rev. Cover and Cover
43	Net For Speaker Panel
42	Speaker Net
41	Hole Closing Sheet
40	Hole Closing Sheet
39	Heatsink Net
38	Power Switch
37	Hinge Between Keyb. Cover and Front P.

Draw: Pirelli	Disegn: 550119	PCB	GENERALMUSIC S.p.A. ITALY
CND: Bocardo	Disegn: 42 PART: 1/1	GP82500	ALL RIGHTS ARE RESERVED. NO COPIES
APP: Falconi	REV: 20-01-87	Cabinet Assembly	OVERPRODUCE THIS DOCUMENT WITHOUT
			WRITTEN CONSENT BY GENERALMUSIC

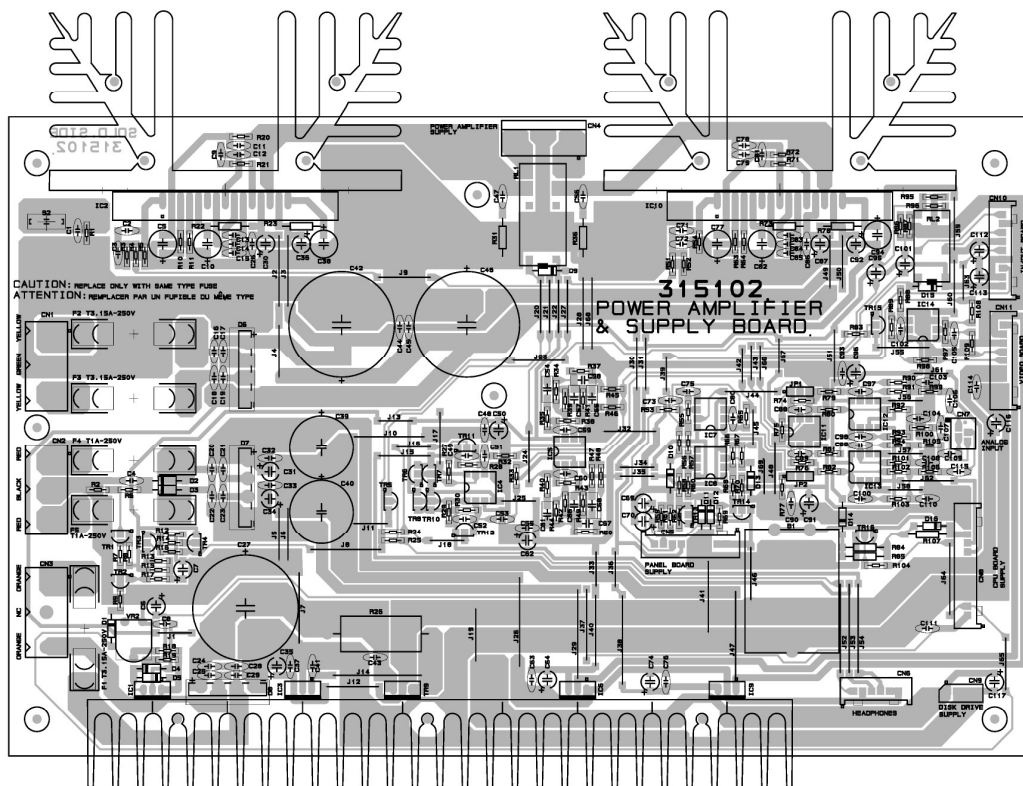


POWER AMPLIFIER & SUPPLY BOARD (PCB LAYOUT).

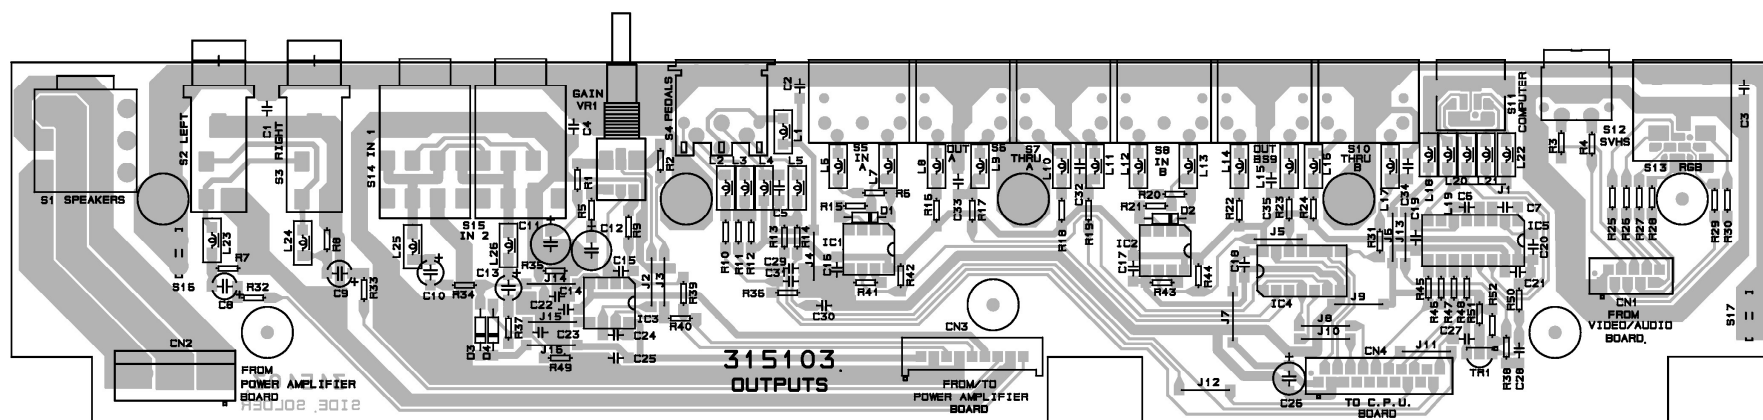


CONTROLS & MIDI I/O BOARD (PCB LAYOUT).

CROSS OVER BOARD (PCB LAYOUT).

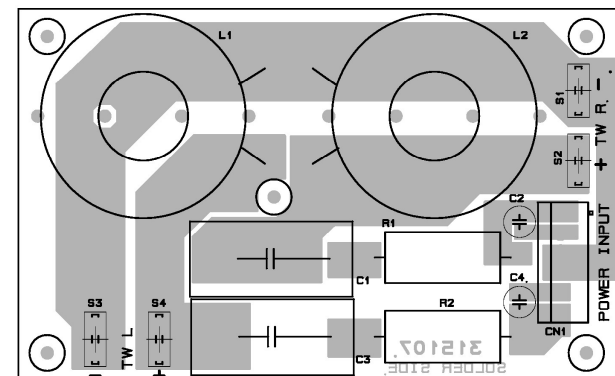


KEYBOARD INTERFACE BOARD (PCB LAYOUT).


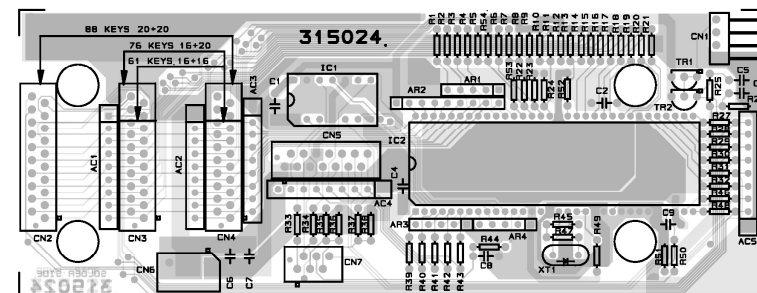


DRAW: BOCCATO	DWG: 315102-315103	SCHEMATIC DIAGRAM: PS2500	GENERALMUSIC S.p.A. Italy
CND: RICCOBELL	DWG: 42 PART: 1/1	Pwr Amp. & Sup. B. - Controls & MIDI I/O B.	ALL RIGHTS ARE RESERVED. NO COPIES OR
APP: PANNELLI	REV: 08-01-97	XOver - Keyb. Interf. (Pcb Layout)	REPRODUCE THIS DOCUMENT WITHOUT
			WRITTEN CONSENT BY GENERALMUSIC.

[illegible]

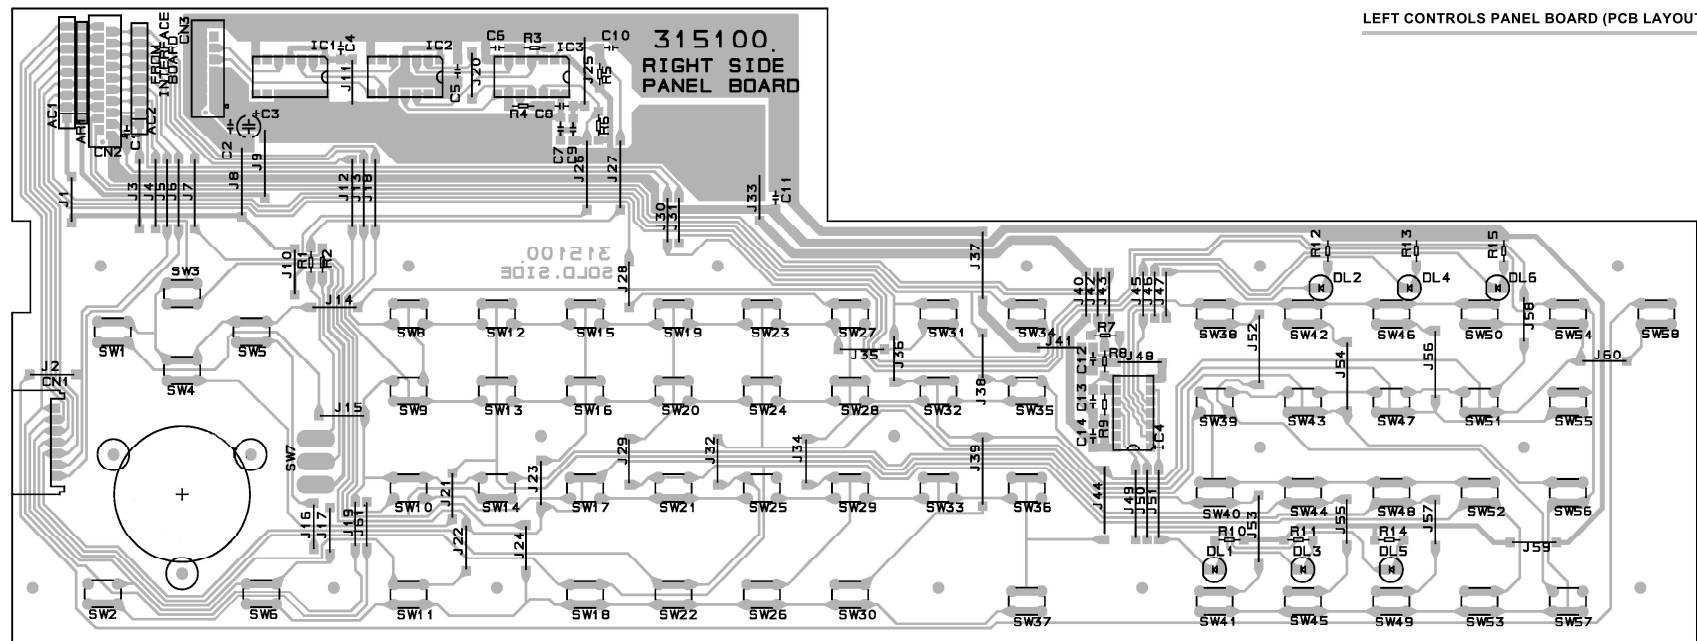





LEFT CONTROLS PANEL BOARD (PCB LAYOUT).

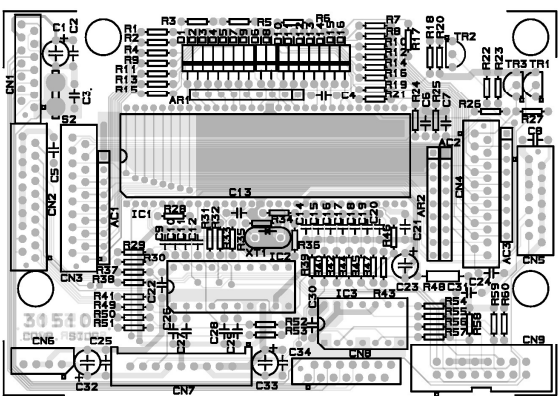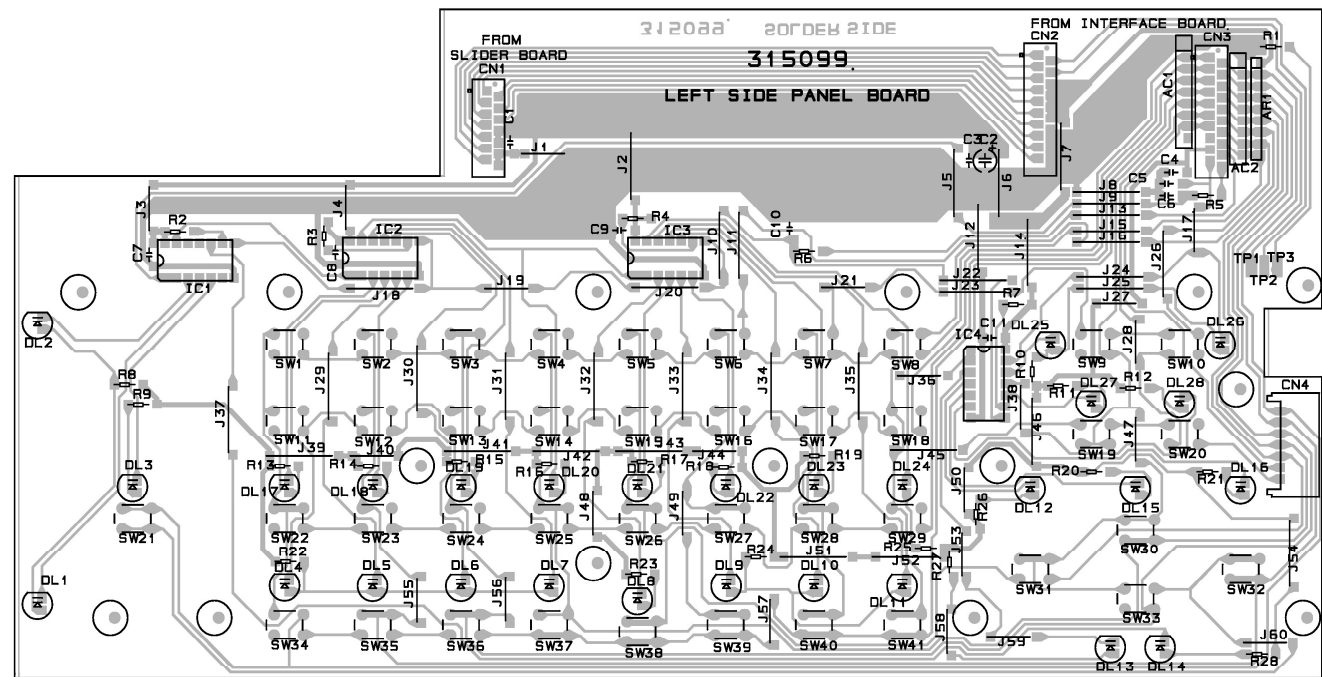




CONTROLS PANEL INTERFACE BOARD (PCB LAYOUT).

RIGHT CONTROLS PANEL BOARD (PCB LAYOUT).




DRAW: BOCCATO	DWG: 315099-315101	SCHEMATIC DIAGRAM PS2500 L & R Control Panel Board - Control Panel Interface Board (Pcb Layout)	GENERALMUSIC S.p.A. Italy ALL RIGHTS ARE RESERVED. NO COPIES OR REPRODUCTIONS OF THIS DOCUMENT WITHOUT WRITTEN CONSENT BY GENERALMUSIC.
CND: RICCOBELL	DWG: 42 PART: 1/1		
APP: PANNELLI	REV: 08-01-97		

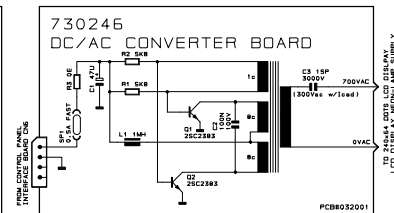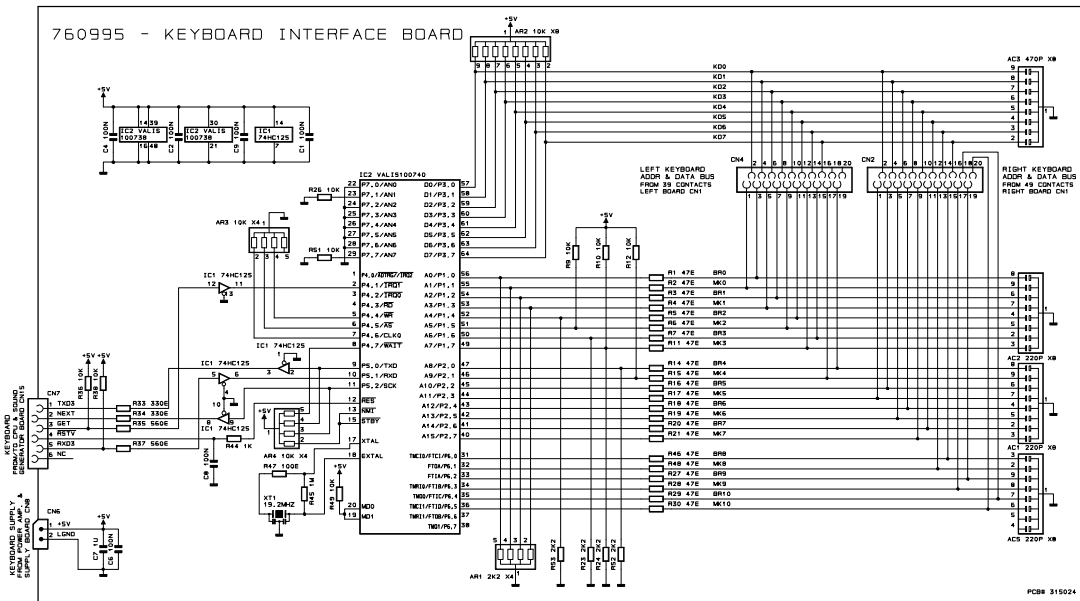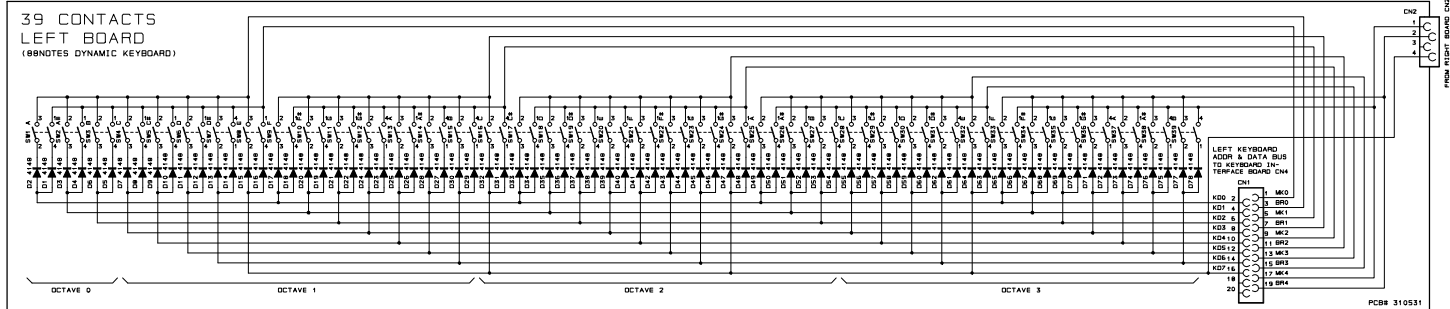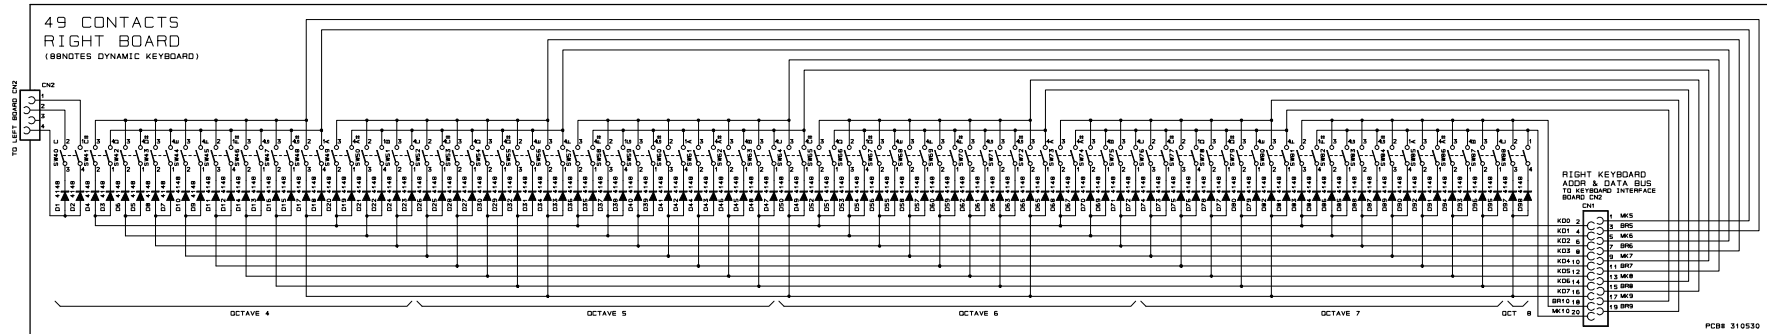




KEYBOARD - COMPUTER CONNECTIONS

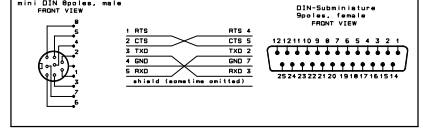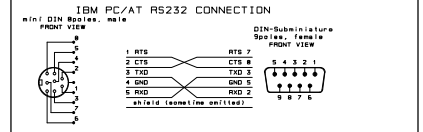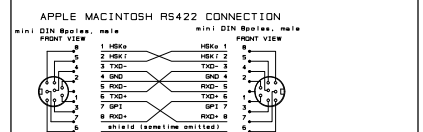

DIR. BOCCATO	DIR. 550122	PCBR 310531 310530 315024 082001	GENERALMATIC S.p.A. ITALY
CND. GLOPPI	DIR. 14 PARTI 1/1	SCHEMATIC DIAGRAM GPS 2500 - PS 2500	ALL RIGHTS ARE RESERVED. NO COPIES
APP. BALANTI	REV. 12/05/95	CONTACTS BOARD & KEYBOARD INTERFACE BOARD - CONVERTER BOARD	OR FINISHED HIS BOARD WITHIN

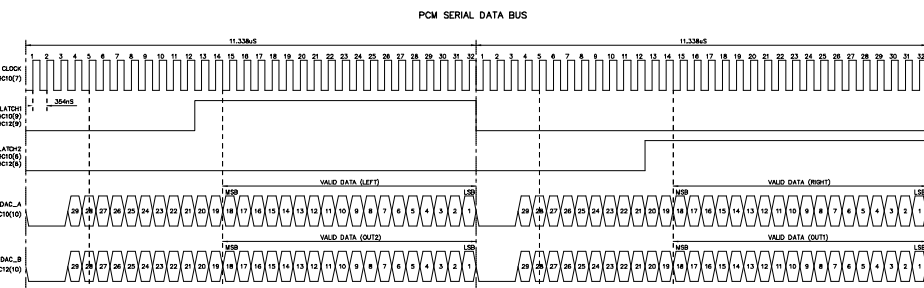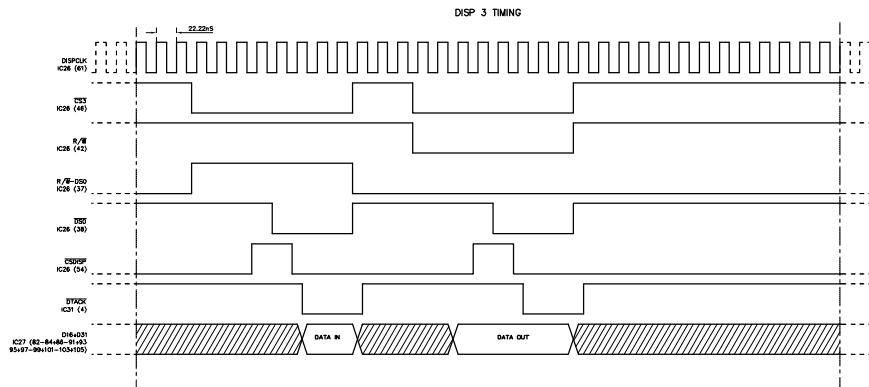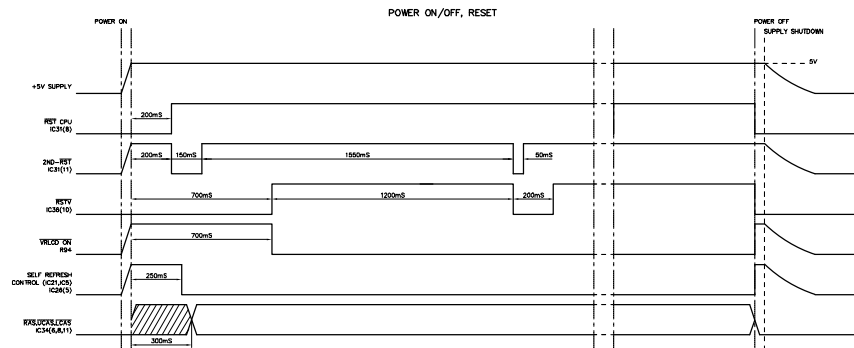

NOTE: ALL COMPONENTS PIN REFERENCE ARE LOCATED ON "CPU & SOUND GENERATOR BOARD" UNLESS OTHERWISE SPECIFIED.

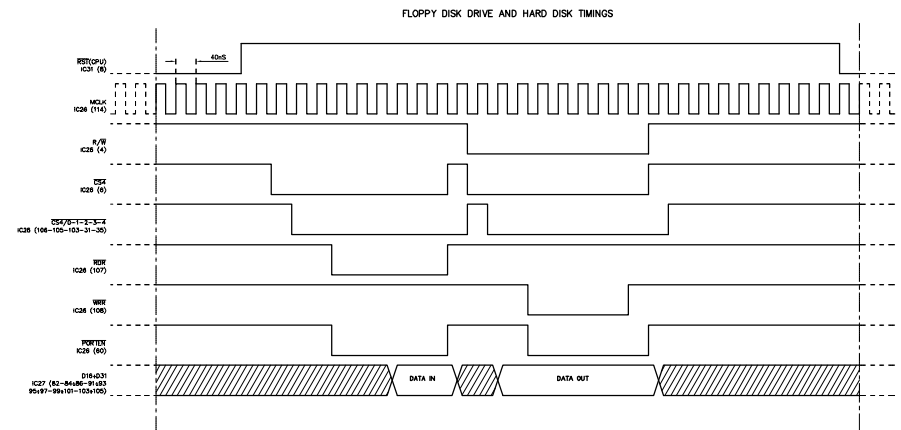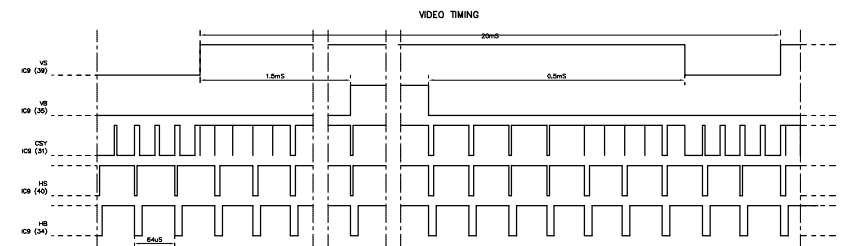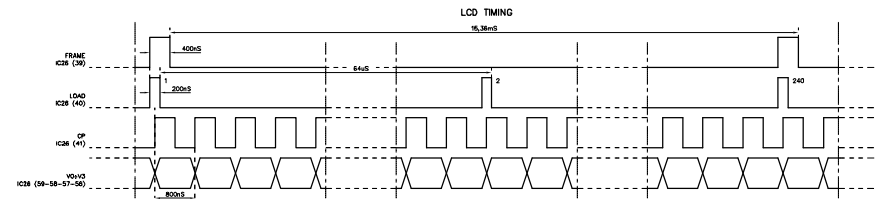


ADJUSTMENTS TABLE						
N.	ADJUSTMENT TYPE	TEST POINT	KEY PRESSED	OPERATION POINT	READING VALUE	NOTE:
1	LCD CONTRAST ADJ.	SEE NOTE	NONE	VR2 POWER AMPLIFIER & SUPPLY BOARD	SEE NOTE	PUT THE CONTRAST POTENTIOMETER ON THE CONTROLS PANEL AT HALF STROKE. TURN THE TRIMMER TO OBTAIN THE BEST CONTRAST. VERIFY THE ADJUSTMENT MOVING THE POTENTIOMETER.
2	COMP DUTY CYCLE ADJ.	RS5 SIDE IC39 AUDIO VIDEO I. BOARD	NONE	CS1 AUDIO/VIDEO I. BOARD	SEE NOTE	SET THE OSCILLOSCOPE ON D.C. AT 1V/50ns. 500V/50ns. TURN THE TRIMMER TO HAVE DUTY CYCLE MORE CLOSE AS POSSIBLE TO 50%. VERIFY THE ADJUSTMENT WITH A MONITOR ATTACHED TO VIDEO OUT SOCKET.






PCB# 315092


DRW RICCIOBELLI	DWG# 550113	PCB# 315092	GENERALMUSIC S.p.A. ITALY
CKD PANNELLI	DSK# 42 PART: 1/1	SCHEMATIC DIAGRAM PS2500 - GPS2500	ALL RIGHTS ARE RESERVED. NO COPIES OR REPRODUCE THIS DOCUMENT WITHOUT WRITTEN CONSENT BY GENERALMUSIC.
APP. ORSETTI	REV: 18-10-98	AUDIO/VIDEO INTERFACE BOARD	

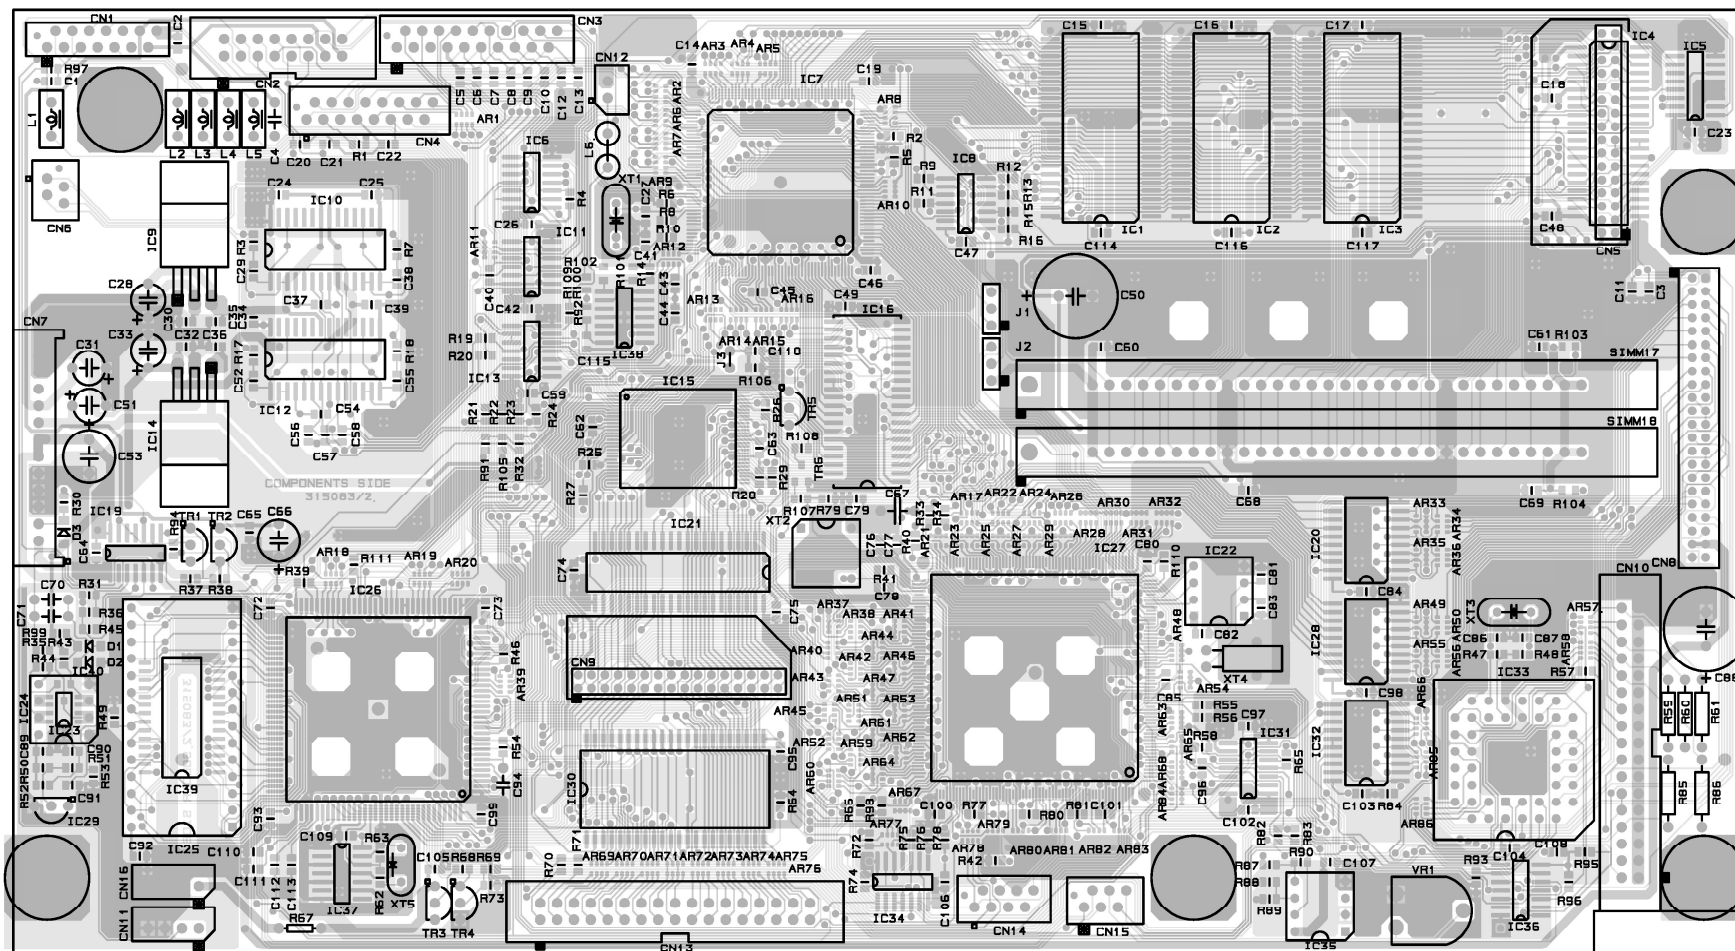

CPU & SOUND GENERATOR BOARD (PCB LAYOUT).

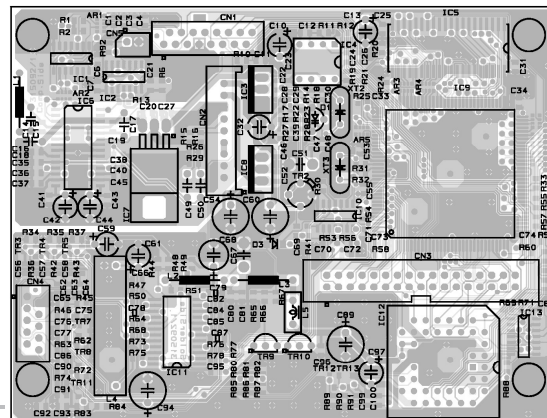

AUDIO / VIDEO INTERFACE BOARD (PCB LAYOUT).

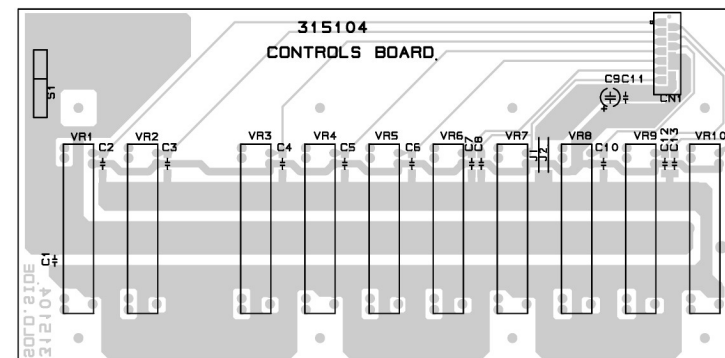


SLIDERS BOARD (PCB LAYOUT).

DIRI: PALANDI	DWG: 31503-31509	SCHEMATIC DIAGRAM PS2500	GENERALMUSIC S.p.A. Italy
CND: BOCCATO	213104	Cpu & Sound Generator Board - Audio/	ALL RIGHTS ARE RESERVED. NO COPIES OR
APP: FALCONI	DWG: 42 PART: 1/1	Video Interface - Sliders B.(Pcb Layout)	REPRODUCE THIS DOCUMENT WITHOUT
	REV: 08-01-87		WRITTEN CONSENT BY GENERALMUSIC.

KIT 970241 (PAL) - KIT 970245 (NTSC) - Audio/Video interface mounting instructions:

- Locate the CPU Board [A] and insert the buffer modules [2] into the connectors [H].
- Connect the cable [3] to the CPU board.
- Fix the AUDIO/VIDEO Board [1] to the threaded locations of the support [B] by means of the screw [8].
- Connect the cables [3-4-5-6-7] to the AUDIO/VIDEO Board [1] and to the CPU [A] and amplifier [D] boards.
- Check that the two jumpers JP1 e JP2 [E] are set to position "A" and that the jumper J1 [F] is set to position "A".

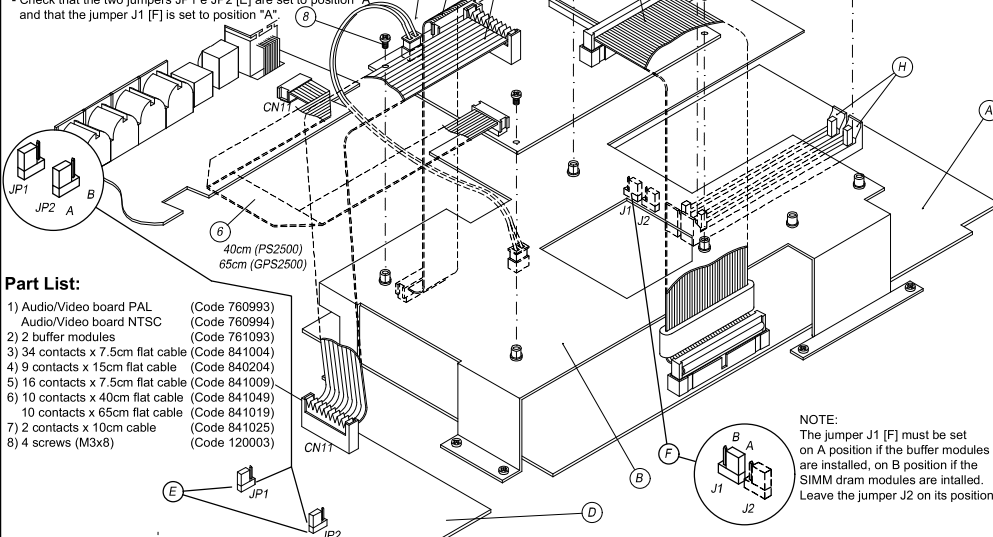

Part List:

- 1) Audio/Video board PAL (Code 760993)
Audio/Video board NTSC (Code 760994)
- 2) 2 buffer modules (Code 761093)
- 3) 34 contacts x 7.5cm flat cable (Code 841004)
- 4) 9 contacts x 15cm flat cable (Code 840204)
- 5) 16 contacts x 7.5cm flat cable (Code 841009)
- 6) 10 contacts x 40cm flat cable (Code 841049)
- 7) 10 contacts x 65cm flat cable (Code 841019)
- 8) 2 contacts x 10cm cable (Code 841025)
- 4 screws (M3x8) (Code 120003)

NOTE:
The jumper J1 [F] must be set on A position if the buffer modules are installed, on B position if the SIMM dram modules are installed. Leave the jumper J2 on its position.


GPS-PS2500 & SK76 KIT 970225 - Volatile SIMM Dram modules mounting instructions:

- Locate the CPU board [A].
- Insert the Simm modules [2] into the CPU's SIMM17-18 connectors [H].
- The operations can be carried out without removing the support [B].
- Check that the jumpers J1 [F] are set to position "B".

Part List:

- 1) N° 2 4Mbyte 70ns Dram module (Code 760994)

NOTE: the SIMM module compatibles are:
1 Mbyte (x8 or x9) 30-pin 70ns maximum access time.
4 Mbyte (x8 or x9) 30-pin 70ns maximum access time.
16 Mbyte (x8 or x9) 30-pin 70ns maximum access time.
The modules must be two.

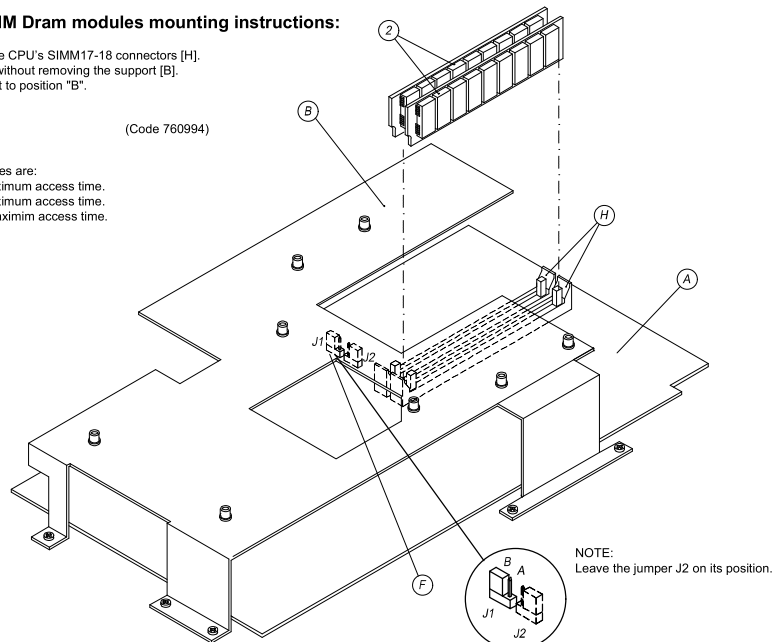

NOTE:
Leave the jumper J2 on its position.


KIT 970207 - Hard disk installation kit mounting instructions:

- Locate the CPU board [A] and remove the support [B] by screwing the locking screws [6].
- Insert the DRAM module [2] into the CPU's CN9 connector [C].
- Replace the support [B].
- Fix the mounting brackets [4] to the Hard Disk [1] by means of the four screw [5] and fix the assembly to the threaded locations [E] by means of the four screws [5].
- Connect one end of the jumper [3] to the Hard Disk connector, starting from the extreme left end in order that 4 free pins remain to the right of the connector, and the other end to the CPU's CN8 connector [D].

Part List:

- 1) 16Mbit DRAM module (Code 761094)
- 2) 44 contacts x 7.5 cm flat cable (Code 840824)
- 3) 2 mounting brackets (Code 171250)
- 4) 8 screws (M3x4) (Code 120113)

NOTE: The optional Generalmusic Hard Disk (Code 970224) is not supplied with this kit. Hard Disks are available from special outlets with the same technical characteristics as the optional Generalmusic hard disk.
If you mount the optional Generalmusic hard disk DO NOT FORMAT THE DEVICE, because it is supplied already formatted and filled with various styles, samples and songs.

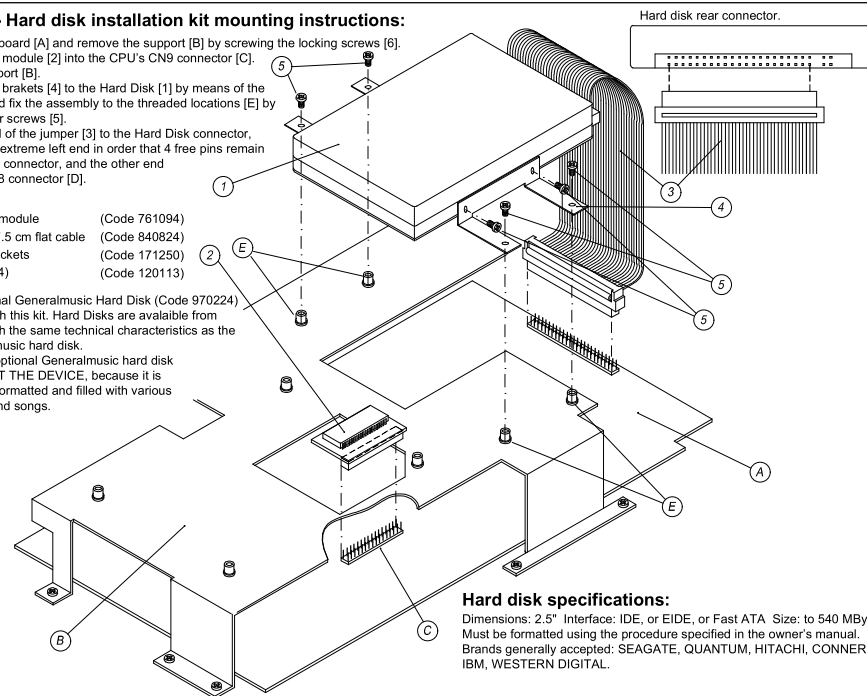


Hard disk specifications:

Dimensions: 2.5" Interface: IDE, or EIDE, or Fast ATA Size: to 540 MByte
Must be formatted using the procedure specified in the owner's manual.
Brands generally accepted: SEAGATE, QUANTUM, HITACHI, CONNER, IBM, WESTERN DIGITAL.

KIT 970213 - Backed Samples Dram mounting instructions:

- Locate the CPU board [A].
- Insert the DRAM module [1] into the CPU's CN5 connector [I].
- The operations can be carried out without removing the support [B].
- Check that the jumper J2 [G] is set to position "B".

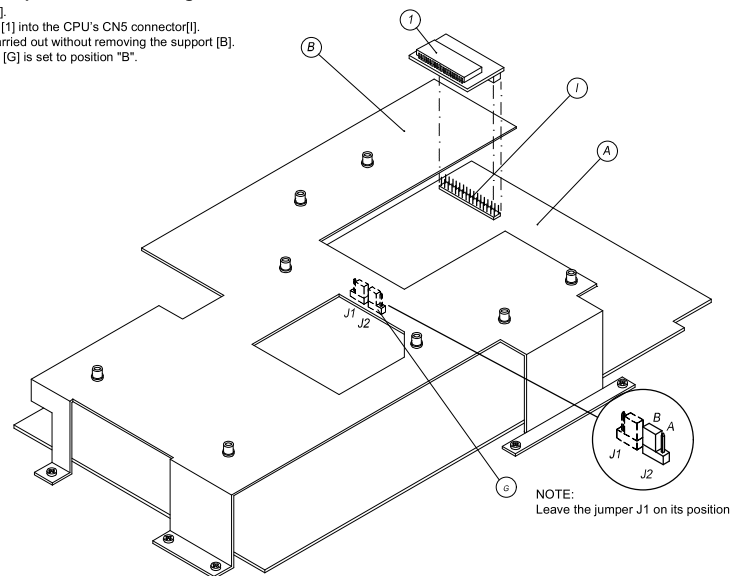

NOTE:
Leave the jumper J1 on its position.

DRAM Boards	DIVIDE 550129	PCISA	GENERALMUSIC S.p.A. ITALY
CMD Boards	DIVIDE 42 PART: 511	Optional Accessories	ALL RIGHTS ARE RESERVED. NO COPIES
APP: Falconi	REV. 20/12/96	Installation Instructions	OVERPRODUCE THIS DOCUMENT WITHOUT
			WRITTEN CONSENT BY GENERALMUSIC

Spare Part List

Legend

GPS2500 = Specify GPS2500 version only

PS2500 = Specify PS2500 version only

Baldwin = Specify Baldwin version only

B = Specify Black version

W = Specify White version

R = Specify Rosewood version

N = Specify Walnut version

US = Specify 115Vac United State mains version

EU = Specify 230Vac Europe mains version

for Generalmusic and common parts the specification is omitted

code **description**

Optional Accessories

130301	2mt Midi Cable
130429	3mt RS232 Cable (MiniDin 8 To D-Sub 9)
970213	Backed Sample Dram
761094	* 16Mbit Dram Module
140923	** 32 Contacts Vert Female Connector
104009	** HM5118160ALJ 16Mbit Dram Ta=70nS
970207	Hard Disk Installation Kit
840824	* 44 Wires 7.5cm Length Flat Cable
761094	* 16Mbit Dram Module
140923	** 32 Contacts Vert Female Connector
104009	** HM5118160ALJ 16Mbit Dram Ta=70nS
171250	* Hard Disk Support
970224	Hard Disk Unit
110402	* Hard Disk (type depend by availability)
970225	Volatlie SIMM Dram
100742	* 4MByte SIMM Module
970245	NTSC Audio/Video Interface Kit (US)
970241	PAL Audio/Video Interface Kit (EU)
841004	* 34 Wires 7.5cm Length Flat Cable
841049	* 10 Wires 40cm Length Flat Cable
841019	* 10 Wires 65cm Length Flat Cable
840009	* 16 Wires 7.5cm Length Flat Cable
840204	* 9 Wires 15cm Length Flat Cable
841025	* 2 Wires 10cm Length Screened Cable
761093	* Buffer Module Board (Pcb# 315023)
103013	** 74HC138D SOIC 1 Of 8 Decoder
103003	** 74HC374DW SOIC Octal D-Type Flip-Flop
760994	* Audio/Video Interf. Board (Pcb# 315092) (NTSC Version)
760993	* Audio/Video Interf. Board (Pcb# 315092) (PAL Version)
230582	** LC Delay Line 400ns 0.5MHz
230569	** FL5R200PNT EMI Coil For Signal
230561	** 47uH 10% 100mA RF-Coil
230560	** 22uH 10% 170mA RF-Coil
141016	** 16 Contacts Vert Female Connector
141013	** 10 Contacts Vert Female Connector
140866	** 34 Contacts Vert Male Connector
140324	** 9 Contacts Vert Male Connector
105005	** FPGA - Video/Lcd Controller
104003	** HM514260JP SOJ Dynamic Ram 4Mbit Ta=70ns
103012	** 74HC125D SOIC Quad Tri-State Buffer
103011	** AD1877 SOIC Dual Channel 1bit ADC
103010	** 74HC04D SOIC Hex Inverter
103007	** 74HC74D SOIC Dual Flip-Flop
100739	** ADV476 Color Palette Ram Dac
100059	** 7805 +5V 1A Voltage Regulator
100045	** 7812 +12V 1A Voltage Regulator
100043	** 7912 -12V 1A Voltage Regulator
100019	** TL071 LN J-Fet Operational Amplifier
091001	** BC857 T0236 Smd Pnp Transistor
091000	** BC847 T0236 Smd Npn Transistor
090153	** BC327 T092 Pnp Transistor
090102	** 2N918 VHF Npn Transistor
081000	** PMLL4148 Smd 100mA 75V Signal Diode
080500	** BB204G Dual Varicap Diode
010717	** 30.20979MHz Quartz Resonator (NTSC Version)
010716	** 7.15909MHz Quartz Resonator (NTSC Version)
010715	** 8.867238MHz Quartz Resonator (PAL Version)
010714	** 30MHz Quartz Resonator (PAL Version)
010602	** 5p2-30pF N750 Ceramic Capacitor Trimmer
130428	* 3mt Video Cable (Din/Rgb To Rca) (NTSC Version)
130317	* 3mt Video Cable (Din/Rgb To Scart) (PAL Version)
120003	* M3x8mm Screw

Accessories

300617	Owner's Manual Folder
300628	Owner's Manual Folder (Baldwin)
271061	Owner's Manual (Italian Language)
271100	Owner's Manual (English Language)
271075	Owner's Manual (Baldwin) (English Version)
955959	Disk "Operating System"
955956	Disk "Demo 02"

955955	Disk "Demo 01"
955960	Disk "Operating System" (Baldwin)
955958	Disk "Demo 02" (Baldwin)
955957	Disk "Demo 01" (Baldwin)
970280	Pianist's Bench (R)
970046	Pianist's Bench (R) (Baldwin)
970281	Pianist's Bench (N)
970242	Pianist's Bench (B) (GPS2500)
970127	Pianist's Bench (B) (PS2500)
970131	Pianist's Bench (W)
510164	* Bench Wooden Parts (R)
510165	* Bench Wooden Parts (N)
510105	* Bench Wooden Parts (R) (Baldwin)
510130	* Bench Wooden Parts (B) (GPS2500)
510107	* Bench Wooden Parts (B) (PS2500)
510120	* Bench Wooden Parts (W)
261356	** Cross Bar (R)
261357	** Cross Bar (N)
261041	** Cross Bar (R) (Baldwin)
261105	** Cross Bar (B)
261048	** Cross Bar (B) (Bright Black)
261069	** Cross Bar (W)
261352	** Leg (R)
261353	** Leg (N)
261042	** Leg (R) (Baldwin)
261104	** Leg (B)
261047	** Leg (B) (Bright Black)
261068	** Leg (W)
261040	** Cushion (B) (R)
261046	** Cushion (N)
261070	** Cushion (W)
340140	* Plastic Foot
150618	* Thumbscrew
120679	* Assembling Joint-Nut
120550	* Assembling Screw-Washer
120090	* Assembling Screw-Bolt

PS2500 Cabinet & Stand Assembly

830604	Stand Assembly (N)
830598	Stand Assembly (R)
830586	Stand Assembly (R) (Baldwin)
830590	Stand Assembly (B) (Baldwin)
830591	Stand Assembly (W) (Baldwin)
720408	* Triple Pedal Assembly
810168	** Reed Switch Board (Pcb#310272)
770717	** Pedals Cable
500063	** Mechanical Parts
340105	*** Plastic Support
171261	** Chassis Support
170880	** Screen Panel
170875	*** Right Pedal
170874	** Left Pedal
170873	** Centre Pedal
170777	** Pedal Return Spring
340500	** Potentiometer Lever
340499	** Actuating Lever
340274	** Pedal Rubber
210016	** 1x10mm Adhesive Black Felt (specify mt)
190181	** Pedals Clog
190178	** Permanent Magnet
190015	** Adhesive Rubber Foot
171264	** Lever Washer
171263	** Potentiometer Return Spring
171262	** Potentiometer Support
150066	** Cable Clamping
070556	** 20K Lin (90deg. Stroke) Potentiometer
710397	* Speaker Box Assembly (N)
710394	* Speaker Box Assembly (R)
710362	* Speaker Box Assembly (R) (Baldwin)
710378	* Speaker Box Assembly (B) (Baldwin)
710379	* Speaker Box Assembly (W) (Baldwin)
770752	** Speakers Cable Ass'y
150021	*** Cord Lock
130270	*** Speakers Cable
261343	** Speaker Box (N)
261131	** Speaker Box (R)
260555	** Speaker Box (R) (Baldwin)
260588	** Speaker Box (B) (Baldwin)
260587	** Speaker Box (W) (Baldwin)
660407	* Speaker Box Fixing
660285	* Cabinet Fixing
510161	* Stand Wooden Parts (N)
510158	* Stand Wooden Parts (R)
510119	* Stand Wooden Parts (R) (Baldwin)
510141	* Stand Wooden Parts (B) (Baldwin)
510142	* Stand Wooden Parts (W) (Baldwin)
261348	** Right Side Leg (N)

261130	** Right Side Leg (R)
260561	** Right Side Leg (R) (Baldwin)
260590	** Right Side Leg (B) (Baldwin)
260589	** Right Side Leg (W) (Baldwin)
261347	** Left Side Leg (N)
261129	** Left Side Leg (R)
260560	** Left Side Leg (R) (Baldwin)
260592	** Left Side Leg (B) (Baldwin)
260591	** Left Side Leg (W) (Baldwin)
261346	** Pedal Cross Bar (N)
261136	** Pedal Cross Bar (R)
260946	** Pedal Cross Bar (R) (Baldwin)
260964	** Pedal Cross Bar (B) (Baldwin)
260599	** Pedal Cross Bar (W) (Baldwin)
340159	* 3M Dual Lock Fastening (Specify mt)
260559	* Speaker Cloth Panel
220114	* 8ohm 70W 8" Woofer Speaker
210242	* Filler for Speaker Box
210074	* Speaker Cloth
210021	* 1x15mm Adhesive Red Felt (specify mt)
170585	* Metal Foot
710395	Cabinet Assembly (N)
710396	Cabinet Assembly (R)
710376	Cabinet Assembly (R) (Baldwin)
710377	Cabinet Assembly (B) (Baldwin)
710377	Cabinet Assembly (W) (Baldwin)
660406	* Music Stand Stop Bar
660405	* Heatsink Grid
660403	* Music Stand Hinge
510162	* Cabinet Wooden Parts (N)
510159	* Cabinet Wooden Parts (R)
510128	* Cabinet Wooden Parts (R) (Baldwin)
510143	* Cabinet Wooden Parts (B) (Baldwin)
510144	* Cabinet Wooden Parts (W) (Baldwin)
261350	** Cover (N)
261135	** Cover (R)
260576	** Cover (R) (Baldwin)
260593	** Cover (B) (Baldwin)
260594	** Cover (W) (Baldwin)
261349	** Cabinet (N)
261147	** Cabinet (R)
260577	** Cabinet (R) (Baldwin)
260586	** Cabinet (B) (Baldwin)
260585	** Cabinet (W) (Baldwin)
261146	** Music Stand (N)
261137	** Music Stand (R)
261123	** Music Stand (R) (Baldwin)
261124	** Music Stand (B) (Baldwin)
260600	** Music Stand (W) (Baldwin)
210017	* 2x10mm Adhesive Black Felt (specify mt)
171331	* Left Cover Clamp
171330	* Right Cover Clamp
660390	Keyboard Cover Handle (N) (R)
660391	Keyboard Cover Handle (B)
660397	Keyboard Cover Handle (W)
660284	Heatsink Grid
651559	Right Panel Support (N) (R) (B)
651579	Left Panel Support (W)
651558	Left Panel Support (N) (R) (B)
651578	Right Panel Support (W)
340821	Music Stand Stop
340545	Black Rubber Foot
340807	Keyboard Slope Support (TP10)
340253	Bar Centre Wheel
340247	Toothed-Bush
340246	Rack
340116	Adhesive Clamp For Pedals Cable
261345	Rear Keyboard Cover (N)
261134	Rear Keyboard Cover (R) (Baldwin)
260562	Rear Keyboard Cover (R) (Baldwin)
260596	Rear Keyboard Cover (B) (Baldwin)
260595	Rear Keyboard Cover (W) (Baldwin)
261344	Front Keyboard Cover (N)
261133	Front Keyboard Cover (R)
260558	Front Keyboard Cover (R) (Baldwin)
260597	Front Keyboard Cover (B) (Baldwin)
260598	Front Keyboard Cover (W) (Baldwin)
229015	8ohm 100W 1" Dome Tweeter Speaker
210091	2x20mm Adhesive Black Felt (specify mt)
210017	2x10mm Adhesive Black Felt (specify mt)
210016	1x10mm Adhesive Black Felt (specify mt)
171402	Control Panel Rear Support
171331	Left Cover Clamp
171330	Right Cover Clamp
171307	Video Board Support
171306	CPU Board Support
171294	Keyboard Cover Wheels Support

171289	Dome Tweeter Support
171286	Disk Drive Group Support
171285	Disk Drive Support
170906	Toothed-Wheels Bar
170864	Hinge Between Rear and Front Keyboard Covers
110400	3.5" Disk Drive
110362	Mains Switch
110083	T2A Fuse 6.3x32mm (US)
110082	T1A Fuse 6.3x32mm (US)
110061	T3.15A Fuse 6.3x32mm (US)
110020	T5A Fuse 5x20mm (EU)
110013	T1.25A Fuse 5x20mm (EU)
110011	T1A Fuse 5x20mm (EU)
110003	T3.15A Fuse 5x20mm (EU)

GPS2500 Cabinet & Stand Assembly

Stand Assembly	
800047	Leg Assembly (B)
800048	Leg Assembly (W)
320818	* Caster
260248	* Leg (B)
260254	* Leg (W)
720430	Pedals Assembly (B)
720476	Pedals Assembly (W)
720467	* Triple Pedal Assembly
810168	** Reed Switch Board (Pcb#310272)
770742	** Pedals Cable
500063	** Mechanical Parts
340105	** Plastic Support
171261	** Chassis Support
170880	** Screen Panel
170875	*** Right Pedal
170874	** Left Pedal
170873	** Centre Pedal
170777	*** Pedal Return Spring
340506	** Cable Clamping
340500	** Potentiometer Lever
340499	** Actuating Lever
340274	** Pedal Rubber
210016	** 1x10mm Adhesive Black Felt (specify mt)
190181	** Pedals Clog
190178	** Permanent Magnet
190015	** Adhesive Rubber Foot
171264	** Lever Washer
171263	** Potentiometer Return Spring
171262	** Potentiometer Support
070556	** 20K Lin (90deg. Stroke) Potentiometer
660121	* Pedals Stand (B)
660122	* Pedals Stand (W)
260249	* Pedals Top Cover (B)
260255	* Pedals Top Cover (W)
210042	* 2x10mm Adhesive Spik (specify mt)
210021	* 1x15mm Adhesive Red Felt (specify mt)
170858	* Pedals Brace
190193	Hexagonal Rod
150618	Thumbscrew
120523	M 6 Black Grower Washer
120456	M 6x1.5mm Black Washer
120070	M 6x20mm Black Screw

Cabinet Assembly

660405	* Heatsink Grid
660280	* Speaker Grid
660110	* Grid For Speaker Panel
510126	* Wooden Parts (B)
510136	* Wooden Parts (W)
510134	* Wooden Parts (B) (Baldwin)
510137	* Wooden Parts (W) (Baldwin)
260969	** Speakers Panel
260569	** Keyboard Cover (B)
260570	** Keyboard Cover (W)
260568	** Cabinet Chassis (B)
260571	** Cabinet Chassis (W)
260578	** Cabinet Chassis (B) (Baldwin)
260579	** Cabinet Chassis (W) (Baldwin)
260566	** Front Panel (B)
260572	** Front Panel (W)
260563	** Speaker Box
260343	** Front Cross Bar (B)
260354	** Front Cross Bar (W)
260342	** Revolving Cover (B)
260344	** Revolving Cover (W)
260341	** Cover Stand (B)
260353	** Cover Stand (W)
260339	** Music Stand (B)
260351	** Music Stand (W)
260338	** Revolving Keyboard Cover (B)
260350	** Revolving Keyboard Cover (W)

260334	** Cover (B)
260346	** Cover (W)
320452	* Pivot For Cover Stand
320090	* Hinge Between Rev. Cover And Cover
320066	* Hinge For Music Stand
320065	* Hinge Between Keyb. Front And Top Covers
210242	* Filler for Speaker Box
210074	* Speaker Cloth
210016	* 1x10mm Adhesive Black Felt (specify mt)
190111	* Adhesive Beating Rubber
170866	* Hinge For Cover Stand
170864	* Hinge Between Keyb. Cover And Front Panel
170863	* Hinge Between Cabinet And Cover
652862	Left Keyb. Cheek Block (B) (GPS2500)
650858	Right Keyb. Cheek Block (B) (GPS2500)
652869	Left Keyb. Cheek Block (W) (GPS2500)
650859	Right Keyb. Cheek Block (W) (GPS2500)
340116	Adhesive Clamp For Pedals Cable
230577	EMI Ferrite For Circular Cable
229015	8ohm 100W 1" Dome Tweeter Speaker
220114	8ohm 70W 8" Woofer Speaker
220093	8ohm 40W 6" Woofer Speaker
220087	8ohm 30W 3" Cone Tweeter Speaker
210091	2x20mm Adhesive Black Felt (specify mt)
210017	2x10mm Adhesive Black Felt (specify mt)
171352	Cone Tweeter Support
171313	Control Panel Rear Support
171312	Control Panel Front Support
171307	Video Board Support
171306	CPU Board Support
171302	Control Panel Right Angular Support
171301	Control Panel Left Angular Support
171299	Control Panel Angular Coupling
171289	Dome Tweeter Support
171286	Disk Drive Group Support
171285	Disk Drive Support
170945	Front Panel Support Square
170389	Rear Cover Support Square
110400	3.5" Disk Drive
110362	Mains Switch
110083	T2A Fuse 6.3x32mm (US)
110082	T1A Fuse 6.3x32mm (US)
110061	T3.15A Fuse 6.3x32mm (US)
110020	T5A Fuse 5x20mm (EU)
110013	T1.25A Fuse 5x20mm (EU)
110011	T1A Fuse 5x20mm (EU)
110003	T3.15A Fuse 5x20mm (EU)

Mains & Transformer Assembly

730475	Mains Assembly (230Vac) (EU)
150021	* Cord Lock (EU)
130294	* Mains Cord (EU)
730476	Mains Assembly (115Vac) (US)
340048	* Cord Lock (US)
130277	* Mains Cord (US)
767987	Mains Filter Board (Pcb#315016) (EU)
768005	Transformer Assembly (Pcb#315016) (US)
230565	* 2.5mH 250V 3A AC Line Filter
140010	* 3 Contacts P=10 Vert Terminal Block
110113	* Fuse Clip 5x20mm 6A max (EU)
110114	* Fuse Clip 6.3x32mm 10A Max (US)
020493	* 100n 250Vac MKP EMI Capacitor "Siemens"
010719	* 2n2 250Vac 7A 20% AC Line "Y" Filter "Murata"
730506	Transformer Assembly (230Vac) (EU)
730654	Transformer Assembly (115Vac) (US)
230128	* Transformer 230Vac 250V (EU)
230120	* Transformer 115Vac 250V (US)
190133	* Lateroid Insulator For Screw Block
140036	* Screw Block (specify contacts)
020493	* 100n 250Vac MKP EMI Capacitor "Siemens"

Power Amplifier & Supply Board

761102	Power Amplifier & Supply Board (Pcb#315102)
141102	* 6 Contacts Vert

100067	*	LM337 1.2-37V 1.5A Adjustable Regulator
100061	*	TL072 Dual J-Fet Operational Amplifier
100045	*	7812 +12V 1A Voltage Regulator
100043	*	7912 -12V 1A Voltage Regulator
100040	*	STK4040X 70W Hybrid Amplifier
090865	*	BD244B TO220 Pnp Transistor
090856	*	J176 TO92 P-Channel J-Fet Transistor
090192	*	BC307 TO92 Pnp Transistor
090182	*	BC173C TO92 Npn Transistor
090153	*	BC327 TO92 Pnp Transistor
090152	*	BC337 TO92 Npn Transistor
080606	*	GBU80 8A Rectifier Diodes Bridge
080156	*	1N4002 1A 100V Rectifier Diode
080103	*	1N4148 100mA 75V Signal Diode
030882	*	10000uF 50V Snap-In Electrolytic Capacitor
030880	*	10000uF 25V Snap-In Electrolytic Capacitor
030858	*	4700u 25V 20% Vert Electrolytic Capacitor
110300	*	4.8V 280mAh Nicd Battery

Crossover Board

730514 Crossover Board (Pcb#315107)	
230537	* 0.22mh 0.75mm Crossover Coil
141102	* 6 Contacts Vert Male Connector
030162	* 3u3 50V 20% Vert Electrolytic Bipolar Capacitor
020930	* 4u7 100V 10% MKT Polyester Capacitor

Phones Assembly

730507	Phones Assembly
730523	* Phones Board (Pcb#310513)
230569	** FL5R200PNT EMI Coil For Signal
140327	** 6 Contacts Hor Male Connector
140217	** Horizontal Jack Stereo Slim Socket
140207	** Horizontal Female Jack Socket
652854	* Phones Board Support
171327	* Phones Board Fixing

Keyboard Assembly

720498	Keyboard & Interface Assembly (TP20)	
720448	Keyboard & Interface Assembly (TP10)	
840762	*	20 Wires 25cm Length Flat Cable
840761	*	20 Wires 12.5cm Length Flat Cable
760995	* Keyboard Interface Board (PCB#315024)	
141018	**	20 Contacts Vert Female Connector
141011	**	6 Contacts Vert Female Connector
140918	**	2 Contacts Hor Male Connector
100740	**	HD6433278 Cpu F=20MHz
100605	**	74HC125 Quad 3-State Buffer
050493	**	10Kx4 1/8w 5% Resistor Array
050492	**	10Kx8 1/8w 5% Resistor Array
050414	**	2Kx4 1/8w 5% Resistor Array
010726	**	19.2MHz Ceramic Resonator With Capacitors
010662	**	220p 10% 50V X8 Cap Array
010661	**	47p 10% 50V X8 Cap Array
720490	* Keyboard Assembly (TP20)	
720417	* Keyboard Assembly (TP10)	
840738	**	4 Wires x 5cm Flat Cable
810552	** 39 Contacts L Board For Dynamic Keyb. (PCB#310531)	
340764	***	3 Dual Contacts Rubber Strip
340211	***	12 Dual Contact Rubber Strip
141018	**	20 Contacts Vert Female Connector
141010	**	4 Contacts Vert Female Connector
080103	**	1N4148 100mA 75V Signal Diode
810551	** 49 Contacts R Board For Dynamic Keyb. (PCB#310530)	
340212	***	13 Dual Contact Rubber Strip
340211	**	12 Dual Contact Rubber Strip
141018	**	20 Contacts Vert Female Connector
141010	**	4 Contacts Vert Female Connector
080103	**	1N4148 100mA 75V Signal Diode
500069	* Mechanical Keyboard Assembly (TP20)	
160211	***	Key Return Spring
151172	***	Last C Key
151171	***	First A Key
151170	***	Sharp Key
151169	***	B Key
151168	***	A Key
151167	***	G Key
151166	***	F Key
151165	***	E Key
151164	***	D Key
151163	***	C Key
500065	* Mechanical Keyboard Assembly (TP10)	
160202	***	Sharp Key Return Spring
160201	***	Natural Key Return Spring
151128	***	Last C Key
151127	***	First A Key
151126	***	Sharp Key
151125	***	B Key

151124	***	A Key
151123	***	G Key
151122	***	F Key
151121	***	E Key
151120	***	D Key
151119	***	C Key
340092	*	5mm Board Spacer

Control Panel Assembly

820489	Control Panel Assembly (N) (R) (PS2500)
820497	Control Panel Assembly (R) (PS2500) (Baldwin)
820509	Control Panel Assembly (B) (PS2500) (Baldwin)
820510	Control Panel Assembly (W) (PS2500) (Baldwin)
820493	Control Panel Assembly (B) (GPS2500)
820506	Control Panel Assembly (W) (GPS2500)
820503	Control Panel Assembly (B) (GPS2500) (Baldwin)
820507	Control Panel Assembly (W) (GPS2500) (Baldwin)
810300	* Left Control Panel Board (Pcb#315099)
730508	** Contrast Board (Pcb#315105)
140874	** Single In Line Vert Male Strip (specify contacts)
070702	** 5K Linear Rotary Potentiometer
141018	** 20 Contacts Vert Female Connector
141015	** 14 Contacts Vert Female Connector
140914	** 7 Contacts Hor Female Zif Mylar Connector
140529	** Microswitch 12V 50mA 0.25mm
100607	** 74HC164 8bit S To P Shift Register
080743	** 3mm Wide Diffused Green Led
080711	** 3mm High Efficiency Red Led
810299	* Right Control Panel Board (Pcb#315100)
141018	** 20 Contacts Vert Female Connector
141015	** 14 Contacts Vert Female Connector
140914	** 7 Contacts Hor Female Zif Mylar Connector
140529	** Microswitch 12V 50mA 0.25mm
100620	** 74HC86 Quad 2-Input Exor Gate
100614	** 74HC74 Dual Flip-Flop
100607	** 74HC164 8bit S To P Shift Register
080711	** 3mm High Efficiency Red Led
761091	* Control Panel Interface Board (Pcb#315011)
141018	** 20 Contacts Vert Female Connector
141015	** 14 Contacts Vert Female Connector
140881	** 14 Contacts Vert Female Con. For Mylar Cable
140873	** 4 Contacts Vert Male Connector
140854	** 16 Contacts Vert Male Connector
140324	** 9 Contacts Vert Male Connector
100740	** HD6433278 Cpu F=20MHz
100645	** 74HC4351 8ch Analog Multiplexer
100605	** 74HC125 Quad 3-State Buffer
090192	** BC307 TO92 Pnp Transistor
090182	** BC173C TO92 Npn Transistor
090153	** BC327 TO92 Pnp Transistor
080103	** 1N4148 100mA 75V Signal Diode
010726	** 19.2MHz Ceramic Resonator With Capacitors
730505	* Sliders Board (Pcb#315104)
141015	** 14 Contacts Vert Female Connector
070551	** 10K Linear 30mm Slider Potentiometer
730489	* Lcd Display Assembly
130600	** 14 Wires 30cm Length Mylar Flat Cable
080749	** Lcd Display 320X240 dots LMG6911RPBC Hitachi
730246	* DC-AC Converter Board (Pcb# Cs032001)
660277	* Control Panel (N) (R) (PS2500)
660290	* Control Panel (R) (PS2500) (Baldwin)
660300	* Control Panel (B) (PS2500) (Baldwin)
660415	* Control Panel (W) (PS2500) (Baldwin)
660287	* Control Panel (B) (GPS2500)
660293	* Control Panel (W) (GPS2500)
660292	* Control Panel (B) (GPS2500) (Baldwin)
660294	* Control Panel (W) (GPS2500) (Baldwin)
651563	* Cloth For Panel Slits
651561	* Display Frame (Black)
651564	* Display Frame (White)
651560	* Display Glass
340523	* Spacer H=6.5mm
340522	* Disk Drive Frame (Black)
340526	* Disk Drive Frame (Light Gray)
340521	* Dial Support
340516	* <EDIT> Rubber Key Pad
340515	* <SOUND GROUP> Rubber Key Pad
340514	* <START STOP> Rubber Key Pad
340513	* <STYLE-GROUP> Rubber Key Pad
340512	* Slider Potentiometer Guide (Black)
340527	* Slider Potentiometer Guide (Light Gray)
340494	* Slider Potentiometer Knob (Black)
340528	* Slider Potentiometer Knob (Light Gray)
340493	* Dial Knob (Black)
340529	* Dial Knob (Light Gray)
340482	* Display Right Rubber Key Pad
340481	* Display Left Rubber Key Pad

340466	*	Spacer H=8mm
340155	*	Spacer H=15mm
230584	*	EMI Ferrite For Flat Cable
210093	*	Adhesive Black Felt Strip
210020	*	1.5x12mm Adhesive Red Felt (specify mt)
171288	*	Display Support
171284	*	Boards Support
171283	*	Disk Drive Frame Fixing
171224	*	Dc-Ac Converter Screen
140528	*	Right Contact Mylar Strip (display)
140527	*	Left Contact Mylar Strip (display)
120960	*	Dial Steel Sphere
110254	*	Rotary Encoder With Snap

Controls & Midi I/O Assembly

730673	Controls & Midi I/O Assembly (PS2500)
730504	Controls & Midi I/O Assembly (PS2500) (Baldwin)
730650	Controls & Midi I/O Assembly (GPS2500)
730503	* Controls & Midi I/O Board (Pcb#315103) (PS2500)
730651	* Controls & Midi I/O Board (Pcb#315103) (GPS2500)
230569	** FL5R200PNT EMI Coil For Signal
141102	** 6 Contacts Vert Male Connector
141018	** 20 Contacts Vert Female Connector
141013	** 10 Contacts Vert Female Connector
140324	** 9 Contacts Vert Male Connector
140248	** 4 Poles Mini Din Female Socket
140247	** 8p Mini Din Female Socket
140231	** Horizontal Jack Stereo Socket (with dual switch)
140228	** Horizontal Jack Stereo Asme
140219	** Horizontal Female 13 Poles Din Socket
140217	** Horizontal Jack Stereo Slim Socket
140216	** Horizontal Female 6 Poles Din Socket
140212	** Horizontal Female 5 Poles Din Socket
100919	** MC33078 Dual LN J-Fet Operational Amplifier
100734	** MAX202E RS232 Drivers/Receiver
100618	** 74HC14 Hex Inverter Schmitt Trigger
100035	** 6N138 Optocoupler
090182	** BC173C TO92 Npn Transistor
080103	** 1N4148 100mA 75V Signal Diode
071011	** 2x10K Alog Rotary Pot
660423	* Controls & Midi I/O Board Support (PS2500)
660278	* Controls & Midi I/O Board Support (PS2500) (Baldwin)
660286	* Controls & Midi I/O Board Support (GPS2500)
340503	* Lower Potentiometer Knob
340502	* Upper Potentiometer Knob
150474	* Plug For Unused Hole

Cpu & Sound Generator Board

761104	Cpu & Sound Generator Board (Pcb#315083)
230569	* FL5R200PNT EMI Coil For Signal
230527	* BL02RN2-R62 EMI Coil For Signal
141018	** 20 Contacts Vert Female Connector
141016	** 16 Contacts Vert Female Connector
141011	* 6 Contacts Vert Female Connector
141010	* 4 Contacts Vert Female Connector
140922	* 32 Contacts Vert Male Strip P=2mm
140917	* 2 Contacts Vert Male Connector
140915	* 44 Contacts Vert Male Strip P=2mm
140913	* Simm Socket 30 Pin
140881	* 14 Contacts Vert Female Con. For Mylar Cable
140877	* Jumper For Contacts Strip (p=2.54mm)
140874	* Single In Line Vert Male Strip (specify contacts)
140866	* 34 Contacts Vert Male Connector
140854	* 16 Contacts Vert Male Connector
140325	* 12 Contacts Vert Male Connector
160603	* MAX709 Power Monitor With Reset
105005	* FPGA - Video/Lcd Controller
105004	* MC68360EM25 Cpu F=25MHz
105002	* DISP3 Digital Sound Processor
104015	* 23C32000G 32Mbit Rom "Samples 2"
104011	* 23C32000G 32Mbit Rom "Samples 1"
104010	* HM514280AJ 4M5bit Dram Ta=70nS
104009	* HM5118160ALJ 16Mbit Dram Ta=70nS
140408	* 23C32000G 32Mbit Rom "Styles"
104007	* E28F016SV-100 1Mbit Flash Rom Ta=100nS
103013	* 74HC138D SOIC 1 Of 8 Decoder
103012	* 74HC125D SOIC Quad Tri-State Buffer
103010	* 74HC04D SOIC Hex Inverter
103004	* AD1865R SOP 18bit D/A Converter
103002	* 74HC245DW SOIC Octal Bus Transceiver
103001	* 74HC08D SOIC Quad 2-Input And Gate
101502	* 74AC125D SOIC Quad Tri-State Buffer
100904	* LM393 Dual Comparator
100731	* DS1202 Clock Calendar
100576	* HM62256LP-12 Static Ram 256Kbit Ta=120nS
100059	* 7805 +5V 1A Voltage Regulator
100058	* 7905 -5V 1A Voltage Regulator

090182	*	BC173C TO92 Npn Transistor
090153	*	BC327 TO92 Pnp Transistor
090152	*	BC337 TO92 Npn Transistor
081000	*	PMLL4148 Smd 100mA 75V Signal Diode
070160	*	2K2 20% Horizontal Linear Trimmer
010734	*	4MHz Quartz Resonator
010727	*	45.1584MHz Quartz Resonator
010725	*	20MHz Ceramic Resonator With Capacitors
010718	*	32MHz Quartz Resonator
010710	*	32768Hz Quartz Resonator
100733	*	uPD72064 Floppy Disk Controller

Wiring Connections

841014	70cm Dual Wire R/B Cable
841013	75cm Dual Wire R/B Cable
841012	20 Wires 40cm Length Flat Cable
841011	6 Wires 65cm Length Flat Cable
841010	2 Wires 50cm Length Flat Cable
841001	105cm Dual Wire R/B Cable
840849	4 Wires 75cm Length Flat Cable
840841	14 Wires 15cm Length Flat Cable
840840	20 Wires 12.5cm Length Flat Cable
840839	20 Wires 17.5cm Length Flat Cable
840838	20 Wires 15cm Length Flat Cable
840826	14 Wires 15cm Length Flat Cable
840812	2 Wires 30cm Length Speakers Cable
840799	4 Wires 7.5cm Length Flat Cable
840768	4 Wires 10cm Length Flat Cable
840722	20 Wires 10cm Length Flat Cable
840708	4 Wires 80cm Length Cable
840689	12 Wires 10cm Length Cable
840662	34 Wires 45cm Length Flat Cable
840628	34 Wires 35cm Length Flat Cable
840582	34 Wires 40 Cm Length Flat Cable
840572	4 Wires 5cm Length Cable
840552	16 Wires 15cm Length Flat Cable
840211	9 Wires 45cm Length Flat Cable
840206	9 Wires 20cm Length Flat Cable
840204	9 Wires 15cm Length Flat Cable
840169	6 Wires 85cm Length Flat Cable
840165	6 Wires 65cm Length Flat Cable
770759	Speaker Cables Assembly (GPS2500)
770749	Speaker Cables Assembly (PS2500)
770750	Mains Cables Assembly (GPS2500)

Notes:

Each spare part is single quantity unless otherwise specified
Asterisk prefix explanation:
Omitted = First level spare part.
One asterisk = Second level, part of previous listed first level part.
Two asterisk = Third level, part of previous listed second level part.
Three asterisk =.....
Any request for not above mentioned part must encompass specific description including:
1) Model name,
2) Section,
3) Module code,
4) Reference name,
5) Quantity number.